

Aromatic Diimides – Potential Dyes for Use in Smart Films and Fibers

New aromatic diimide fluorescent dyes have been prepared with potential for use as chemical sensors and in chromogenic polymers. These dyes have been designed to utilize excited state electron transfer reactions as the means for sensing chemical species. For example, an aniline end-capped anthryl diimides functions effectively as an “on-off” sensor for pH and the detection of phosphoryl halide based chemical warfare agents, such as Sarin. In the absence of analytes, fluorescence from this dye is completely quenched by excited state electron transfer from the terminal amines. Reaction of these amines inhibits electron transfer and activates the fluorescence of the dye. Another substituted anthryl diimide is presented with the capability to detect pH and nitroaromatic compounds, such as TNT. Films prepared by doping small amounts (less than 0.1 weight percent) of several of these dyes in polymers such as linear low density polyethylene exhibit thermochromism. At room temperature, these films fluoresce reddish-orange. Upon heating, the fluorescence turns green. This process is reversible – cooling the films to room temperature restores the orange emission.




Aromatic Diimides – Potential Dyes for Use in Smart Films and Fibers

*Advances in Colorants, Chemicals, Finishes and Fibrous Materials
Symposium
Greenville, SC
June 3-4, 2008*

Michael A. Meador, Daniel S. Tyson, Faysal Ilhan,
Ashley Carbaugh


**Polymers Branch
Structures and Materials Division
NASA Glenn Research Center
Cleveland, OH 44135
Michael.A.Meador@nasa.gov
(216) 433-9518**

Polymers Branch Overview

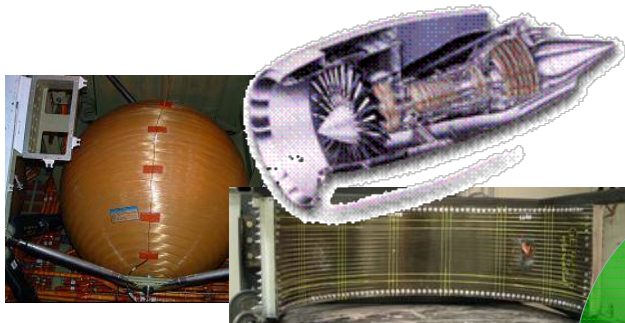


Propulsion Materials

- High use temperature polymers and composites
- Material concepts for fan containment
- New polymers and composites for COPVs

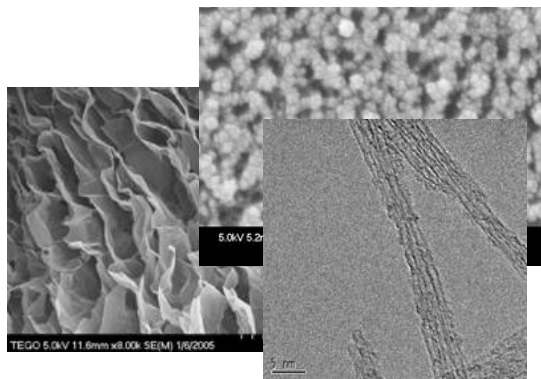


Nanostructured Materials

- Nanocomposites (clay, graphene)
- Nanotube based composites
- Durable, polymer cross-linked aerogels

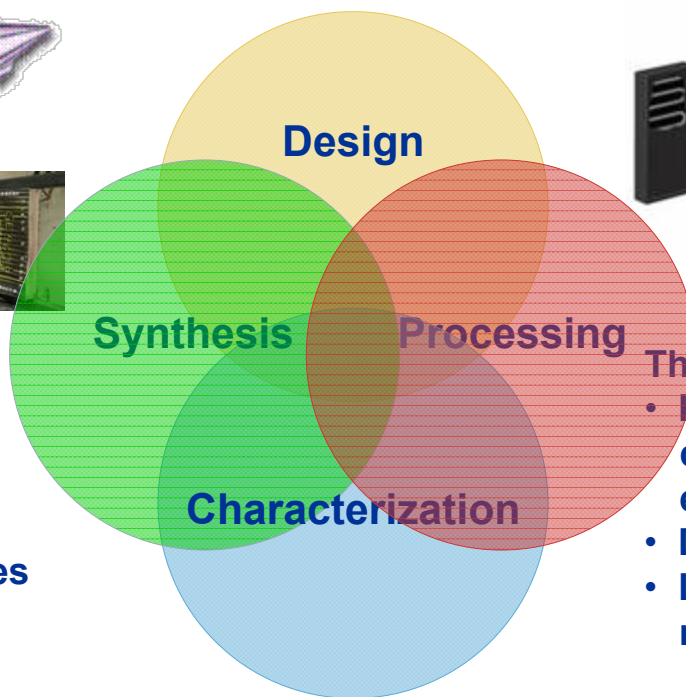


Enable:

- Reduced Mass
- Enhanced Performance
- Improved Durability
- Reduced Cost

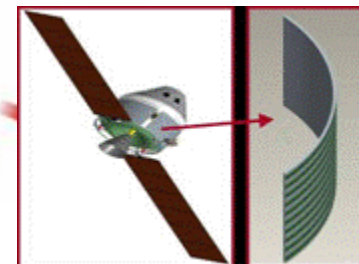

Thermal Control Materials

- High conductivity polymers and composites for radiators and heat exchangers
- Durable, lightweight insulation
- Low permeability, microcrack resistant polymers and composites

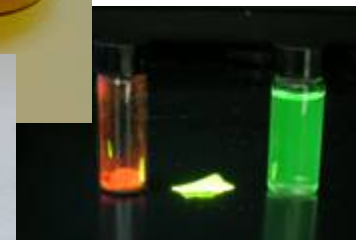


Functional Polymers

- Adaptive polymers
- Fluorescent sensors
- Conductive membranes

Organic Materials for Molecular Sensors

Technology Background

Fluorescence based methods are highly sensitive for the detection of chemical and biological species and can be used for the determination of strain and/or degradation in materials.

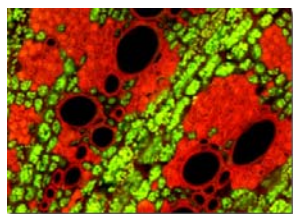

Fluorescent dye enhanced photomicrograph of Alfalfa Root



Fluorescence based strain sensors – courtesy CWRU

NASA Applications


- Astronaut Health Management
- Air & Water Quality Monitoring
- Integrated Vehicle Health Management





Research and Results

Developed route to novel diimide materials with potential use in molecular sensors, electronics and electroluminescent devices

“On-Off” Fluorescent Sensor for pH and Chemical Warfare Agents

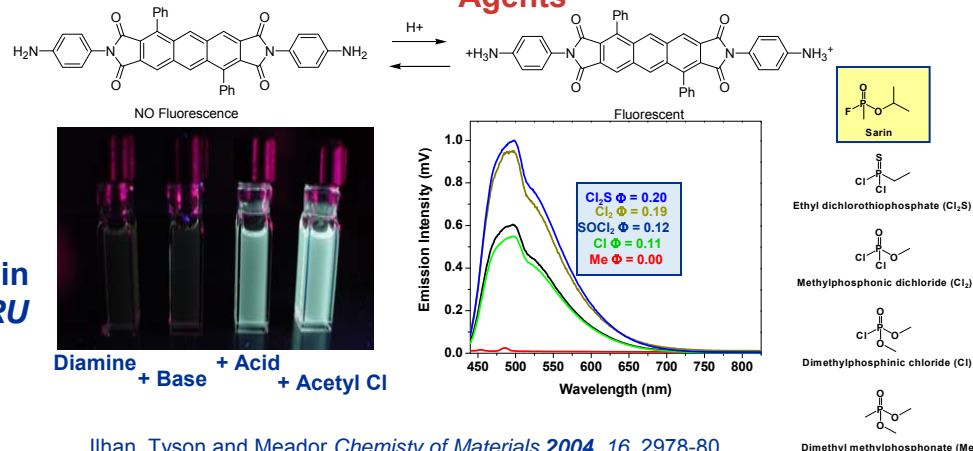


Novel Perylene Diimide Has Potential as Strain Sensor

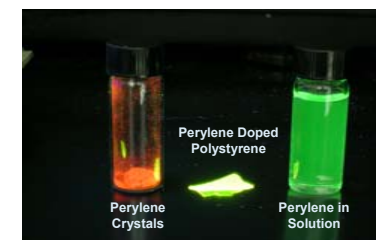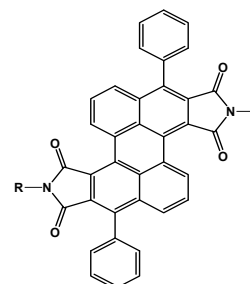

Red Luminescence in Solid State Due to Exciplex

Tyson, Ilhan and Meador *Journal of the American Chemical Society* **2006**, 128, 702-703

Photoenolization of o-Methylphenyl Ketones








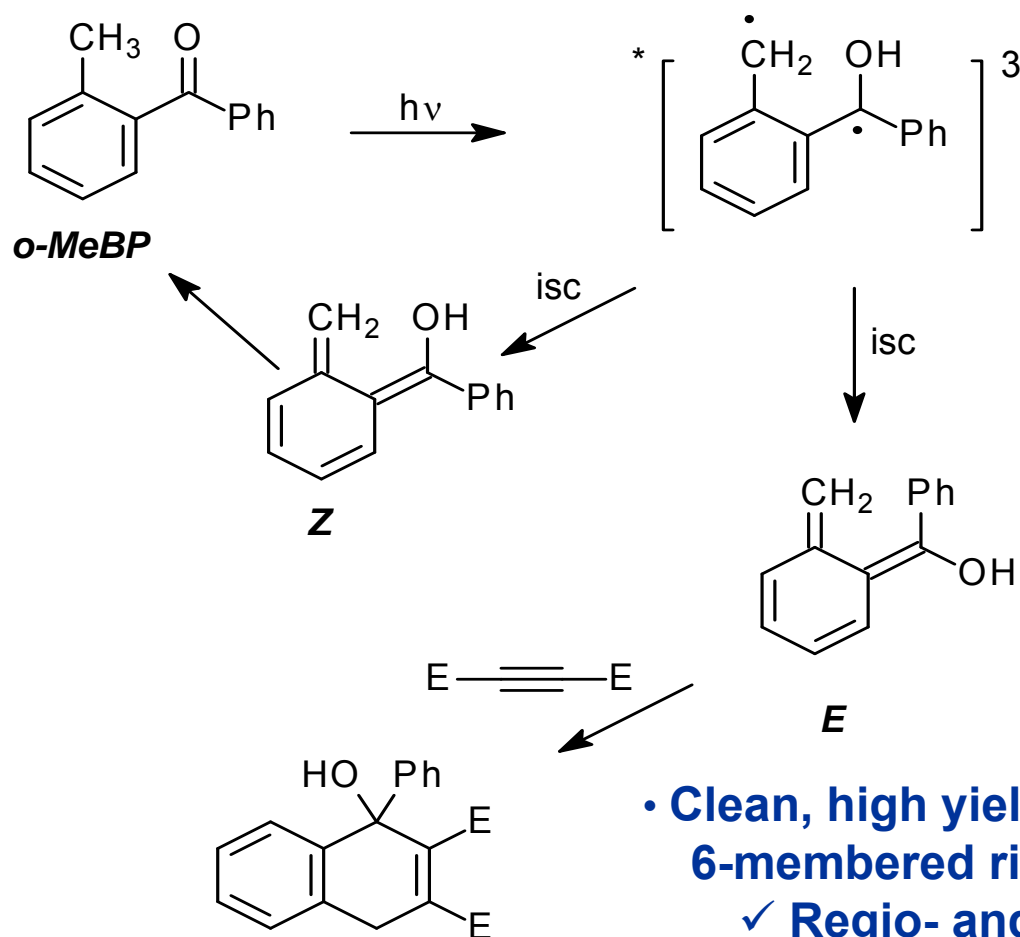


- Clean, high yield route to fused 6-membered rings
 - ✓ Regio- and stereospecific
- Not applied to polymer synthesis


Porter, G.; Tchir, M. *J. Chem. Soc. A* **1971**, 3772

Yang, N.C; Rivas, C.J. *J. Am. Chem. Soc.* **1961**, 83, 2213

Diels-Alder Trapping of Bis(o-xylylenol)s is Versatile

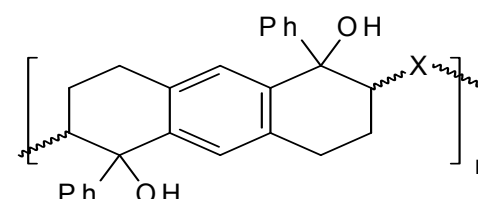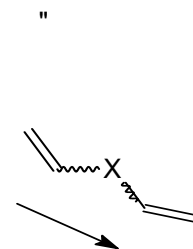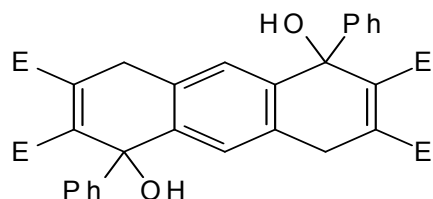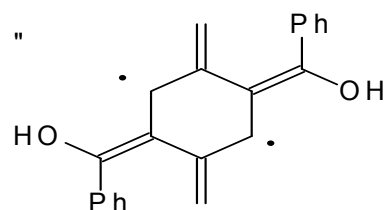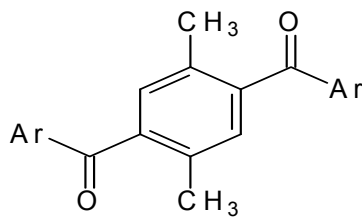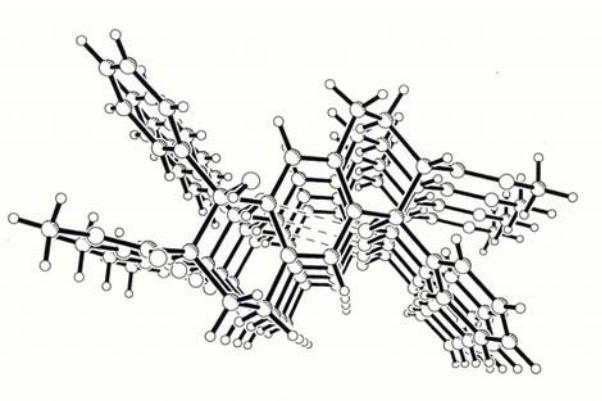


Chemical Yields for Bisadduct Formation are High

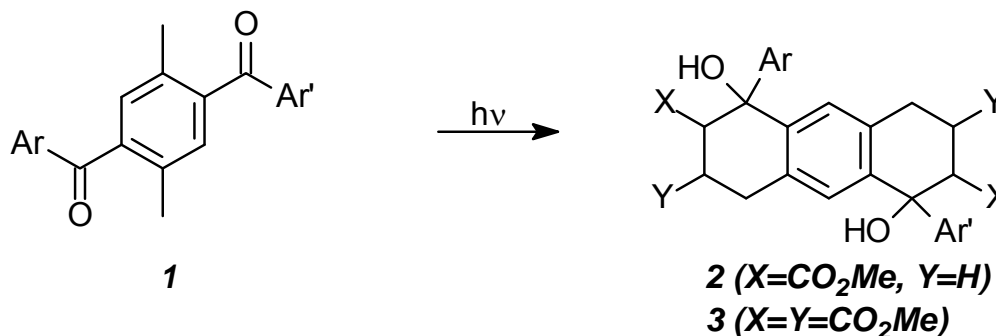


<i>Ar</i>	<i>Ar'</i>		<i>X</i>	<i>Y</i>	2	3
Ph	Ph	MeAcry	E	H	25+56	
Ph	Ph	Me ₂ Fum	E	E		86
4-Me	4-Me	MeAcry	E	H	90	
4-Me	4-Me	Me ₂ Fum	E	E		82
4-OMe	4-OMe	MeAcry	E	H	75	
4-OMe	4-OMe	Me ₂ Fum	E	E		86
4-OC ₁₂ H ₂₅	4-OC ₁₂ H ₂₅	MeAcry	E	H	80	
4-OC ₁₂ H ₂₅	4-OC ₁₂ H ₂₅	Me ₂ Fum	E	E		80
4-CN	4-CN	MeAcry	E	H	97	

Reaction Progress Can Be Monitored by ^1H nmr

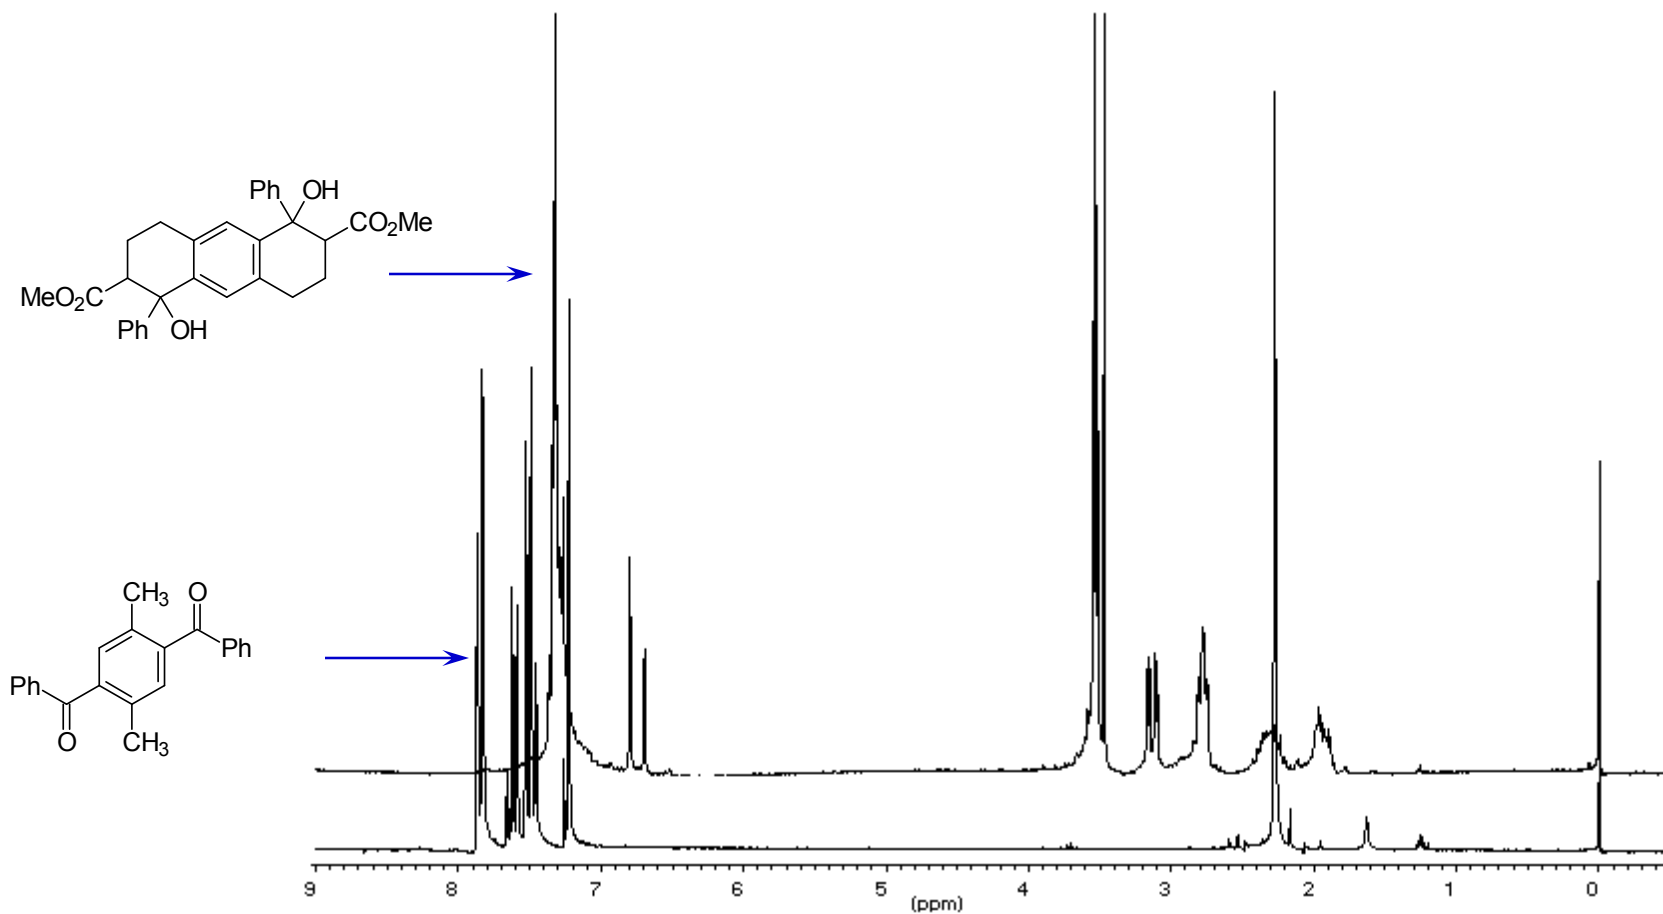


Mono- and Bisadduct Quantum Yield Effected by Extent of Diketone Conversion

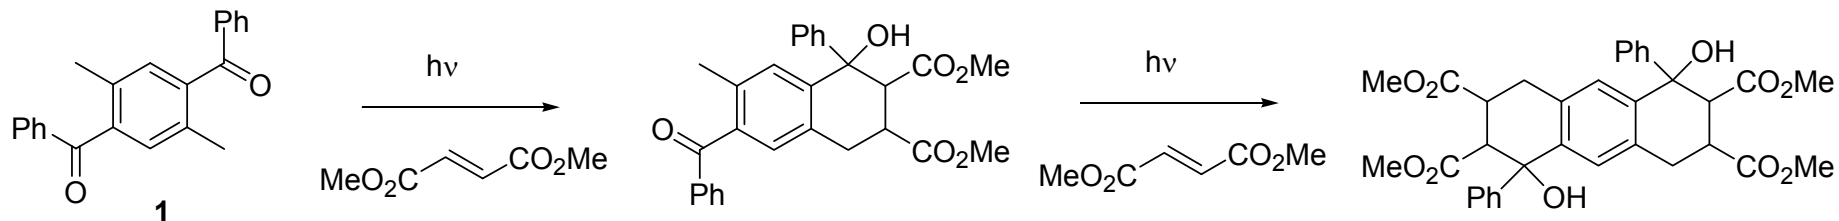


$$\Phi = \frac{\text{moles of photoproduct}}{\text{Einstein of light}}$$

**E/Z photoenol formation is 1:1 →
Maximum theoretical quantum yield
for monoadduct formation is 0.5**

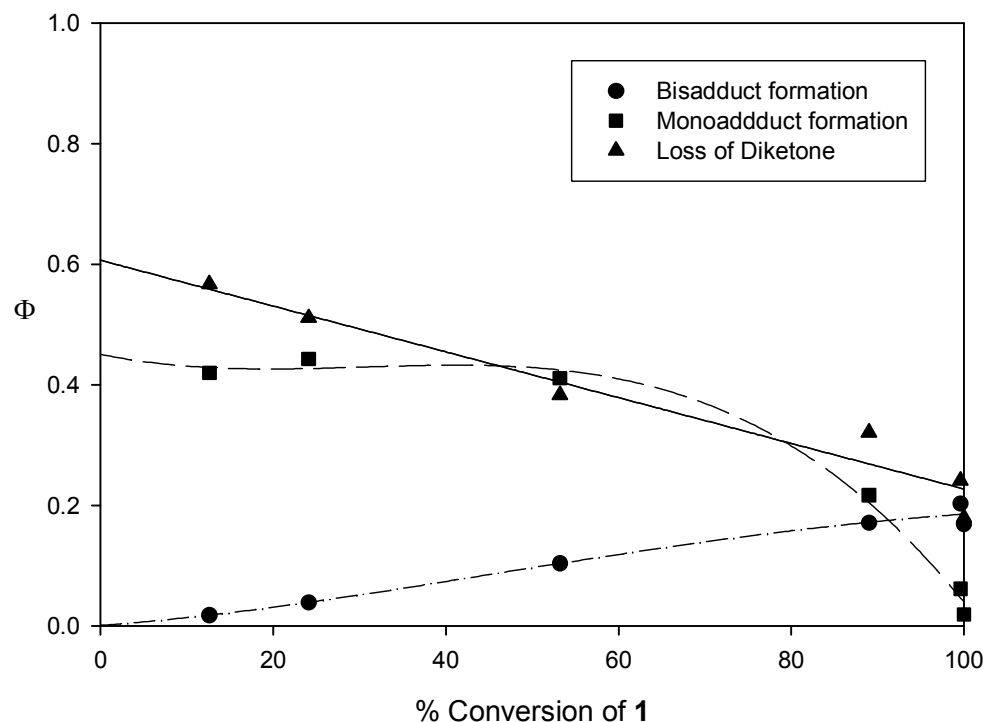


Bisadducts are Readily Converted into Anthracenes

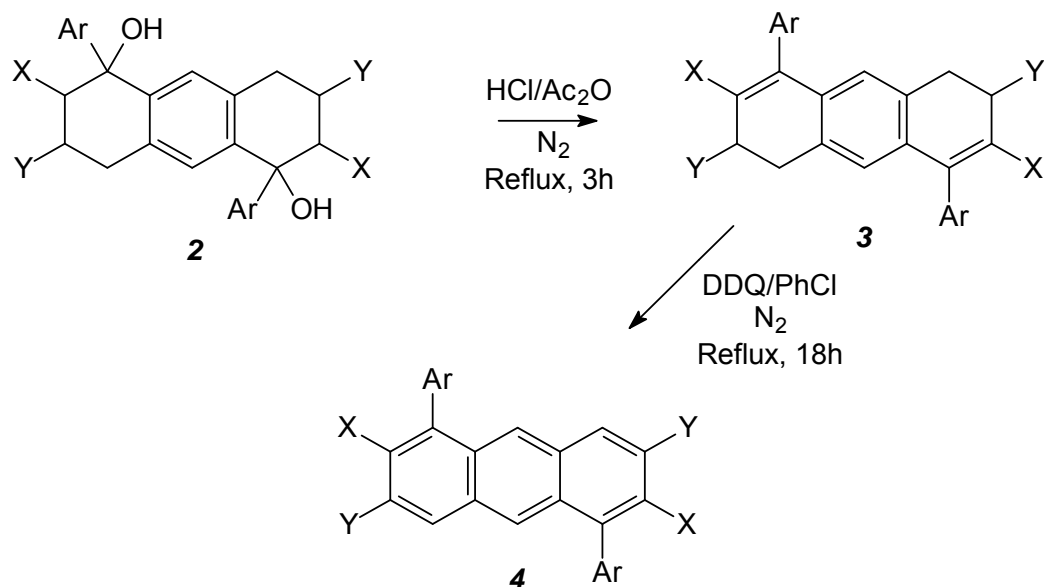


<i>Ar</i>	<i>X</i>	<i>Y</i>	3	4
Ph	E	H	90	96
Ph	E	E	100	80
4-MeOPh	E	H	87	81
4-MeOPh	E	E	80	80
4-FPh	E	H	89	72
4-FPh	E	E	68	70

Versatile Route to Arenes

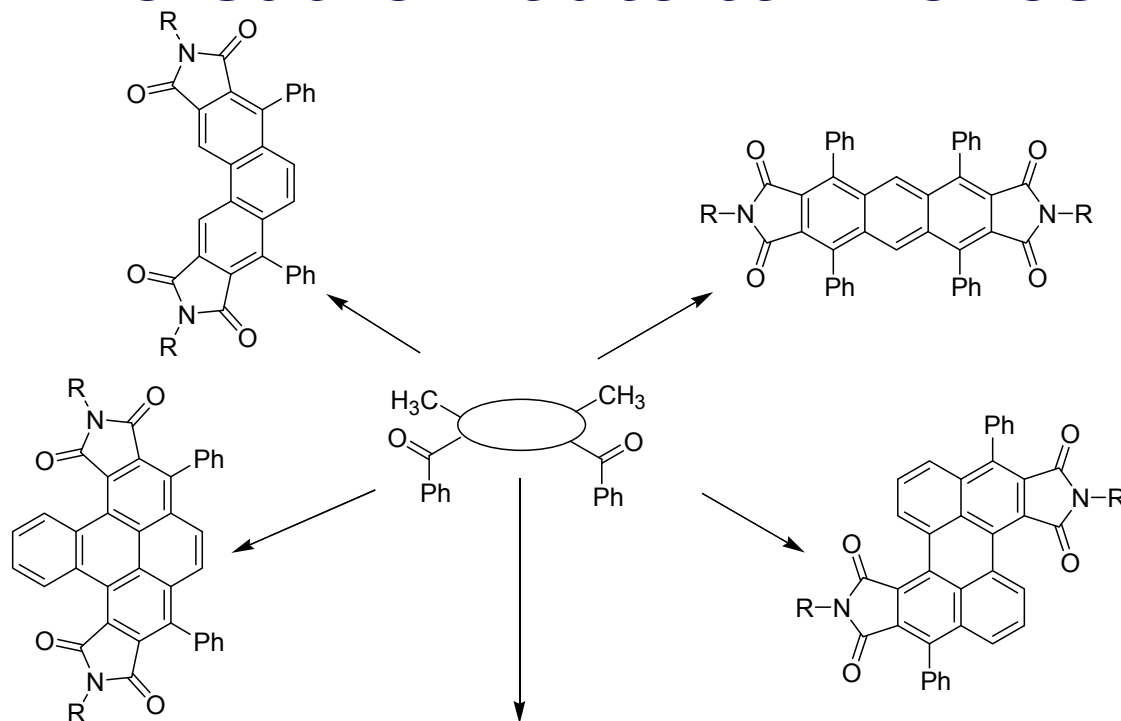


Org. Lett. **2006**, *8*, 577-80.

J. Am. Chem. Soc. **2006**, *128*, 702-703


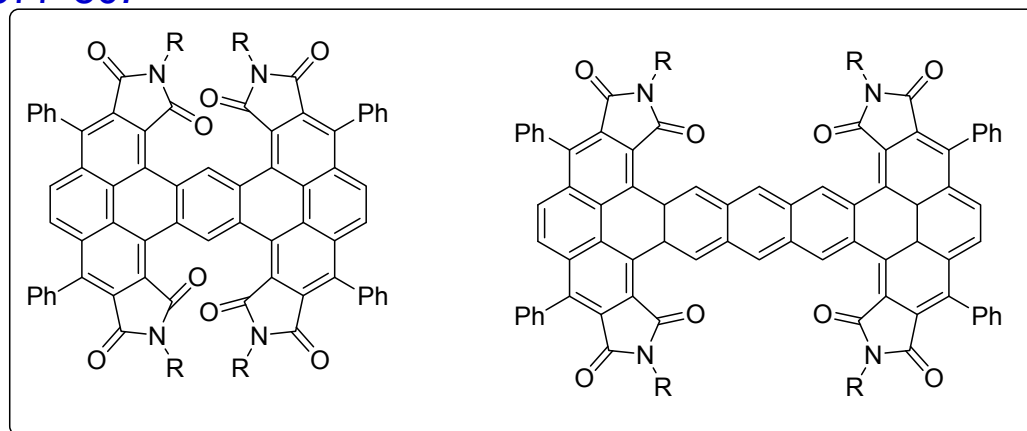


New Approaches to Perylene Diimides

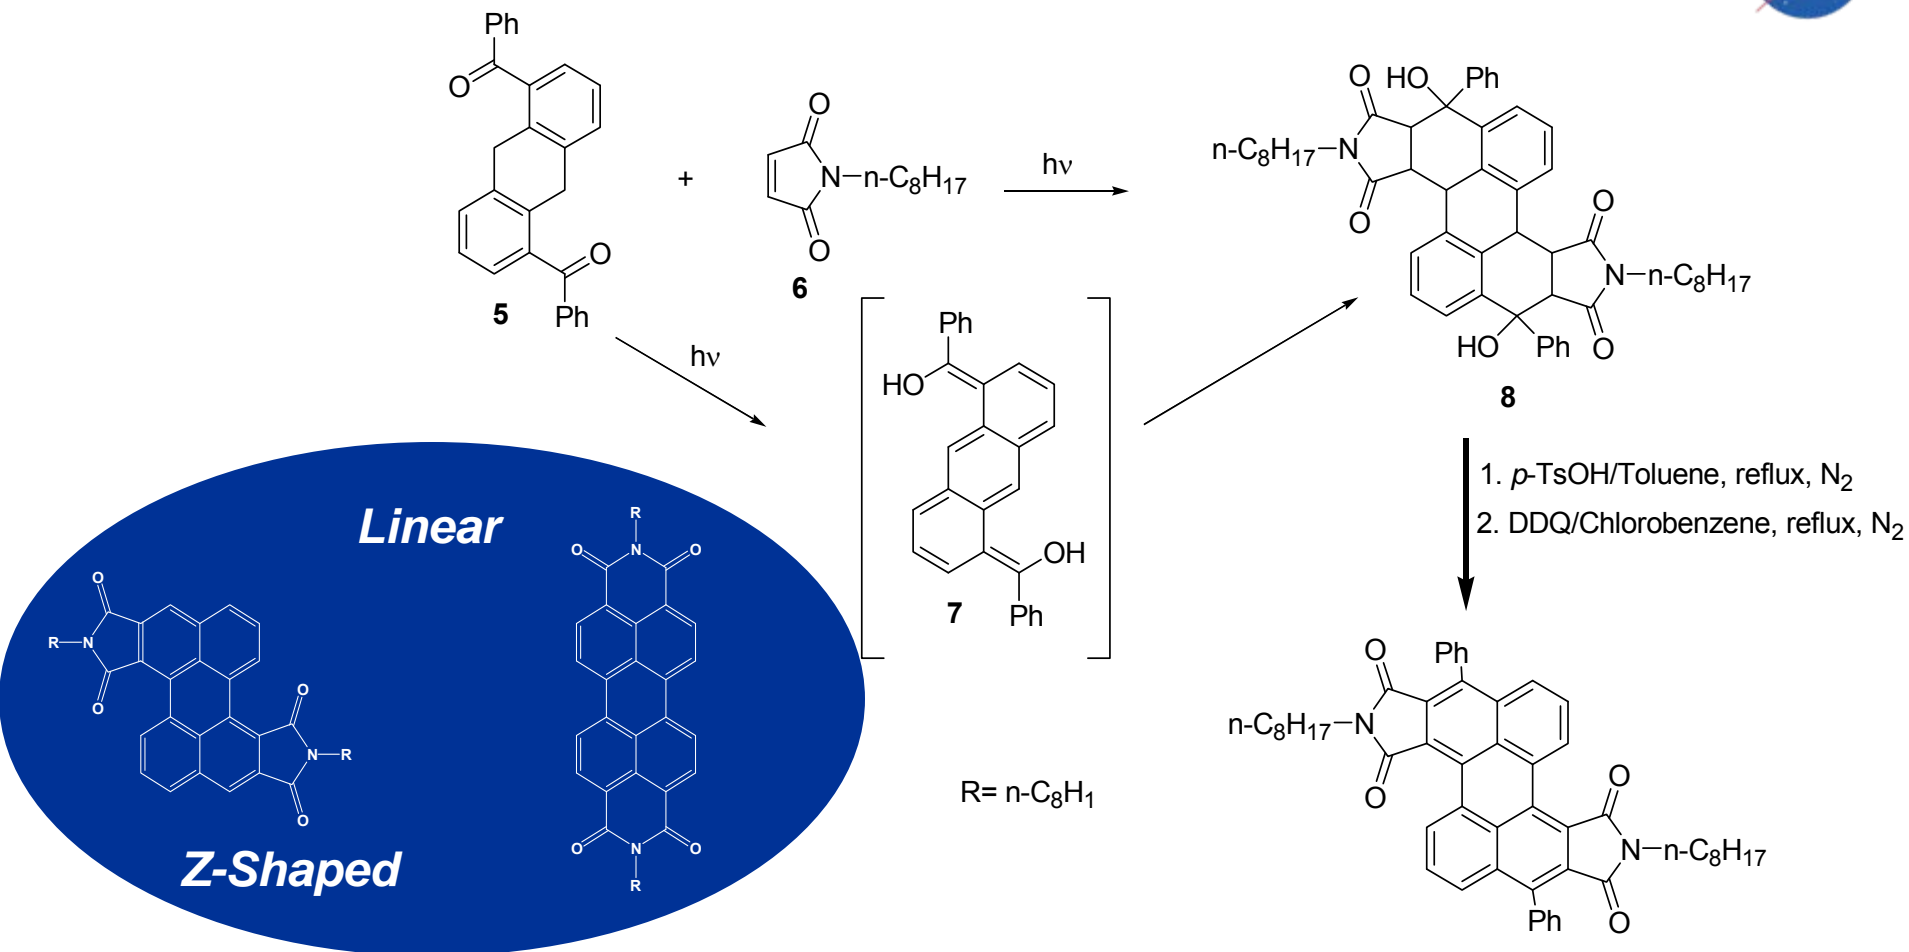

- Perylene diimides are used in a wide array of materials, including electron transfer systems, liquid crystals, photovoltaics, and fluorescent sensors.
- Conventional synthetic routes to perylene diimides focused on *linear* derivatives – commercial availability of dianhydride.
- New approach provides route to *Z-shaped* perylene bisimides


Absorption and Emission Spectra of Various Z-shaped Perylene Diimides

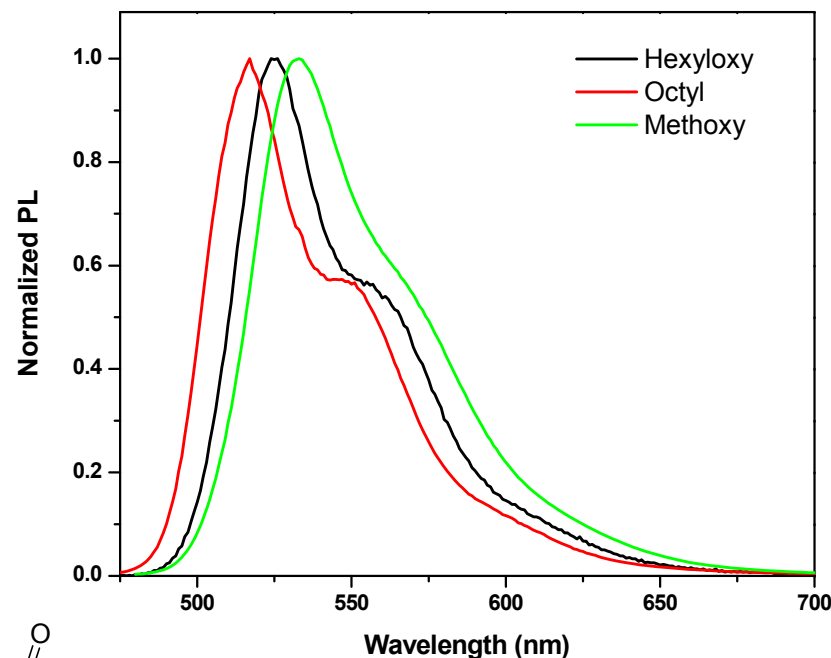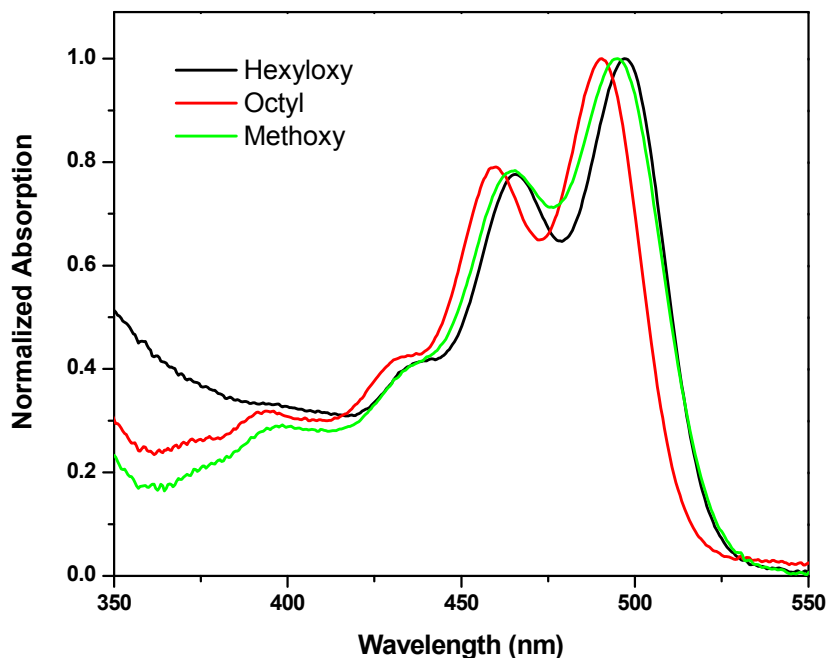

Φ_f (CH_2Cl_2)

Octyl = 0.67

p-Hexyloxyphenyl = 0.031

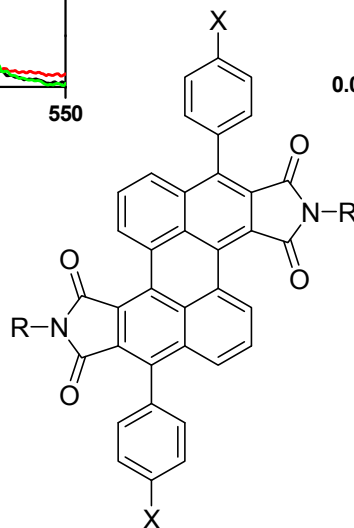


Hexyloxy $\text{R} = p\text{-C}_6\text{H}_{13}\text{O-Ph}$, $\text{X} = \text{H}$

Octyl $\text{R} = n\text{-C}_8\text{H}_{17}$, $\text{X} = \text{H}$


Methoxy $\text{R} = n\text{-C}_8\text{H}_{17}$, $\text{X} = \text{OCH}_3$

Perylene Diimide Exhibits Excimer Fluorescence in the Solid State




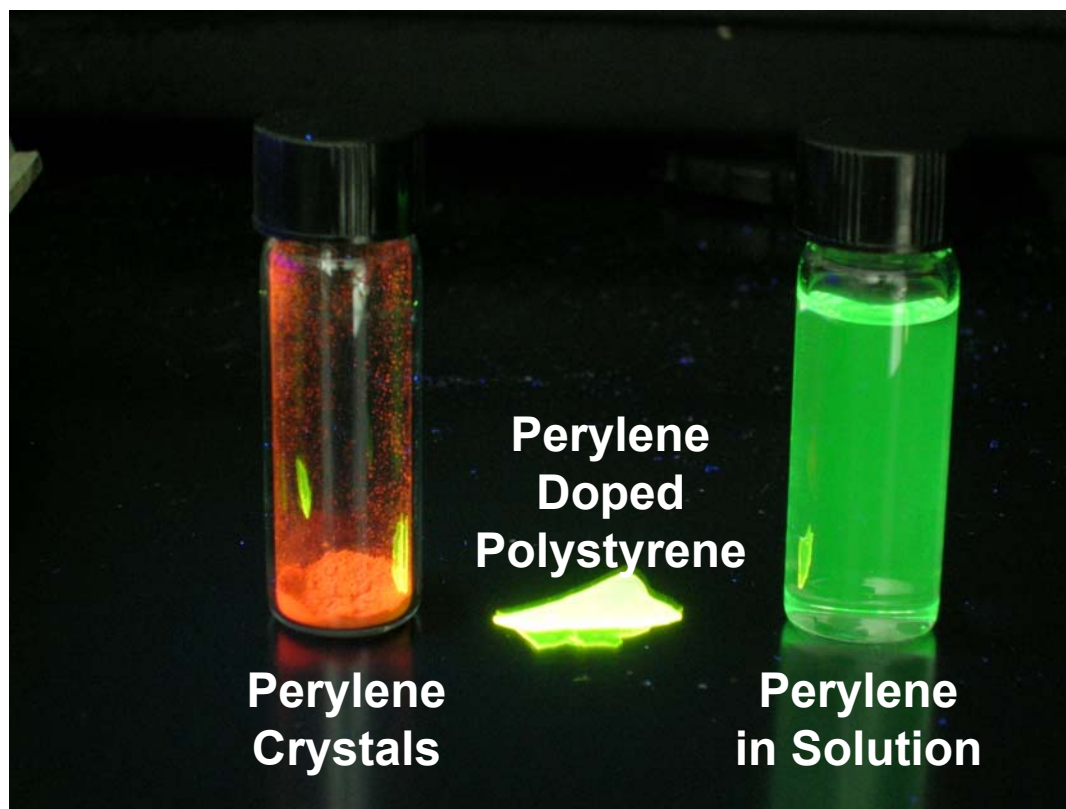


- Difference in emission color due to the formation of excited state complexes (exciplexes) in which perylenes form stacks
- Potential to use this phenomenon in the design of thermo- and mechanochromic polymers

Preparation of N-Octyl Benzo[e]pyrene Diimide

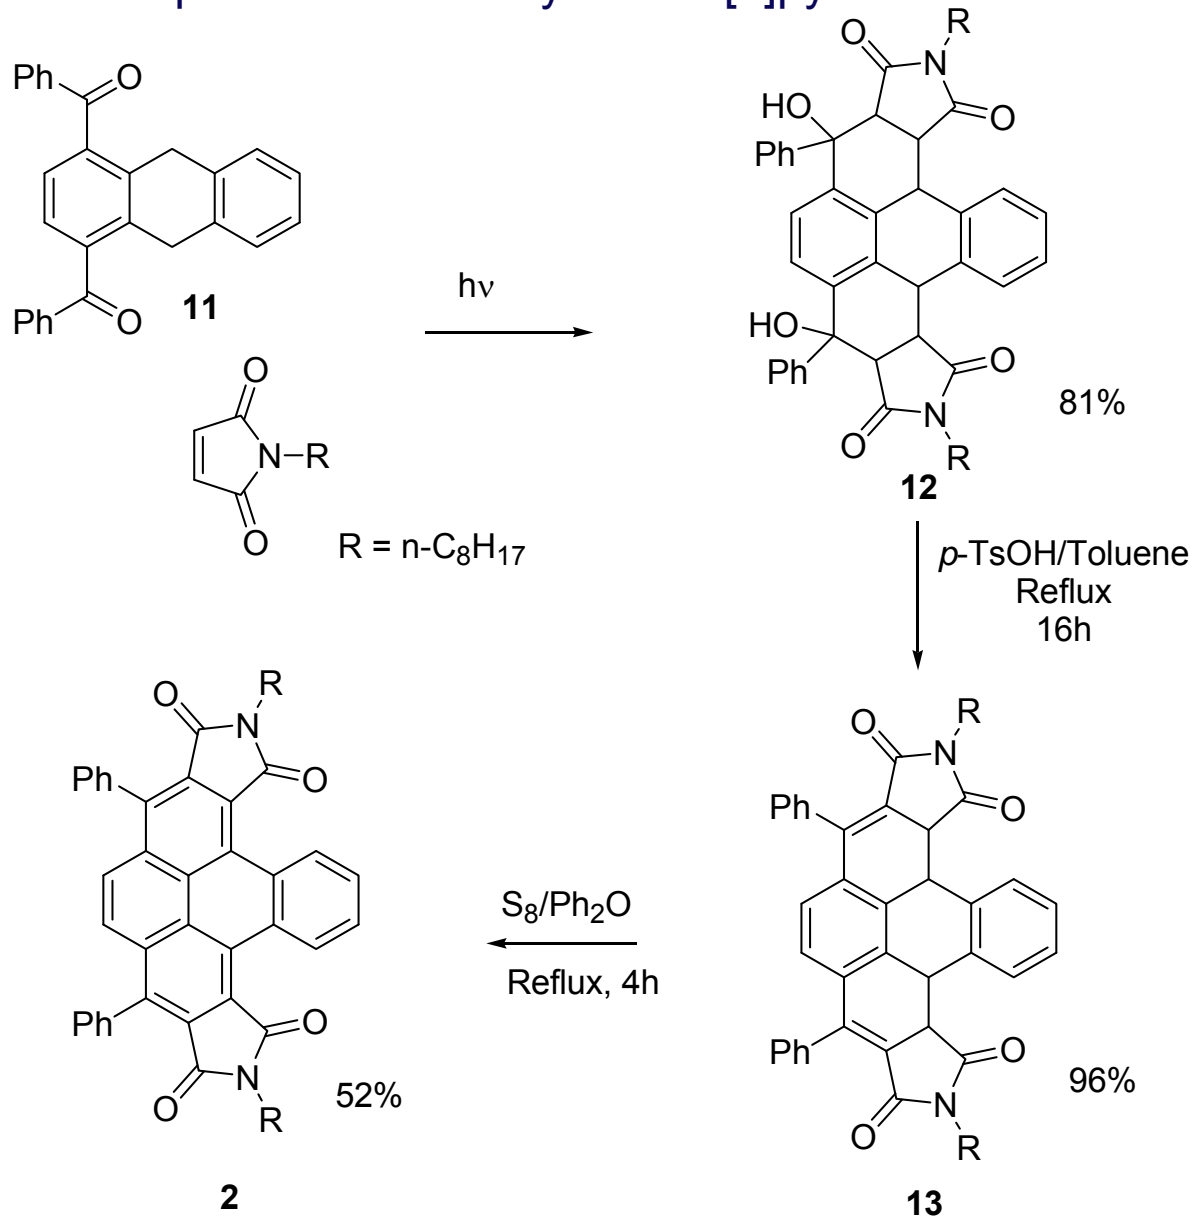


Absorption and Emission of Phenanthrene and Benzo[e]pyrene Bisimides and Benzo[e]pyrene

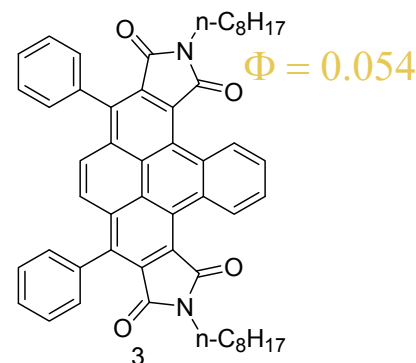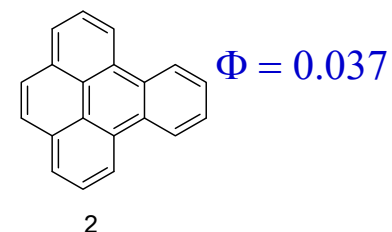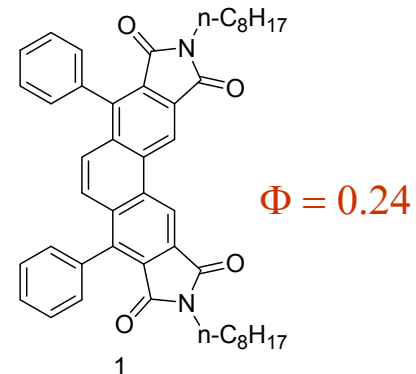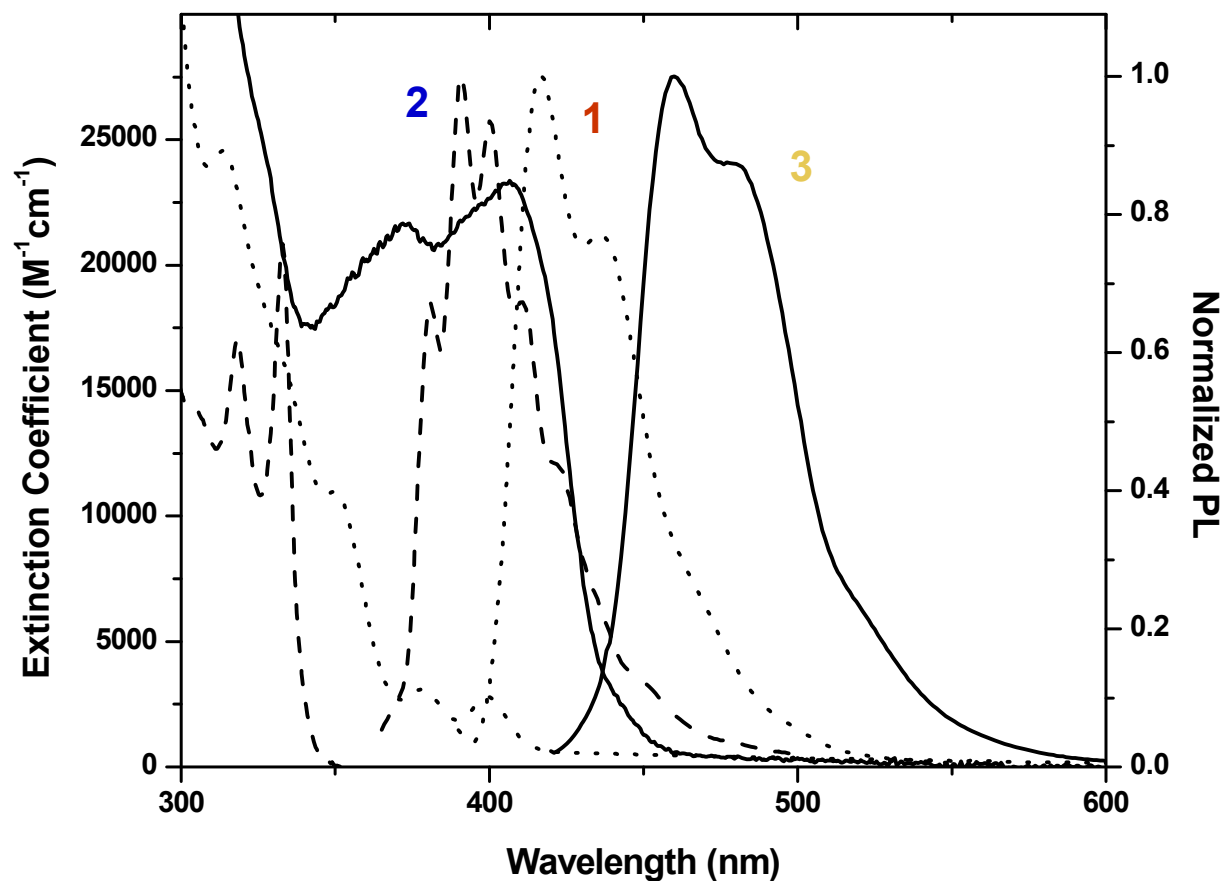


Spectra and quantum yields measured in CH_2Cl_2


Synthesis of Anthracene Diimides

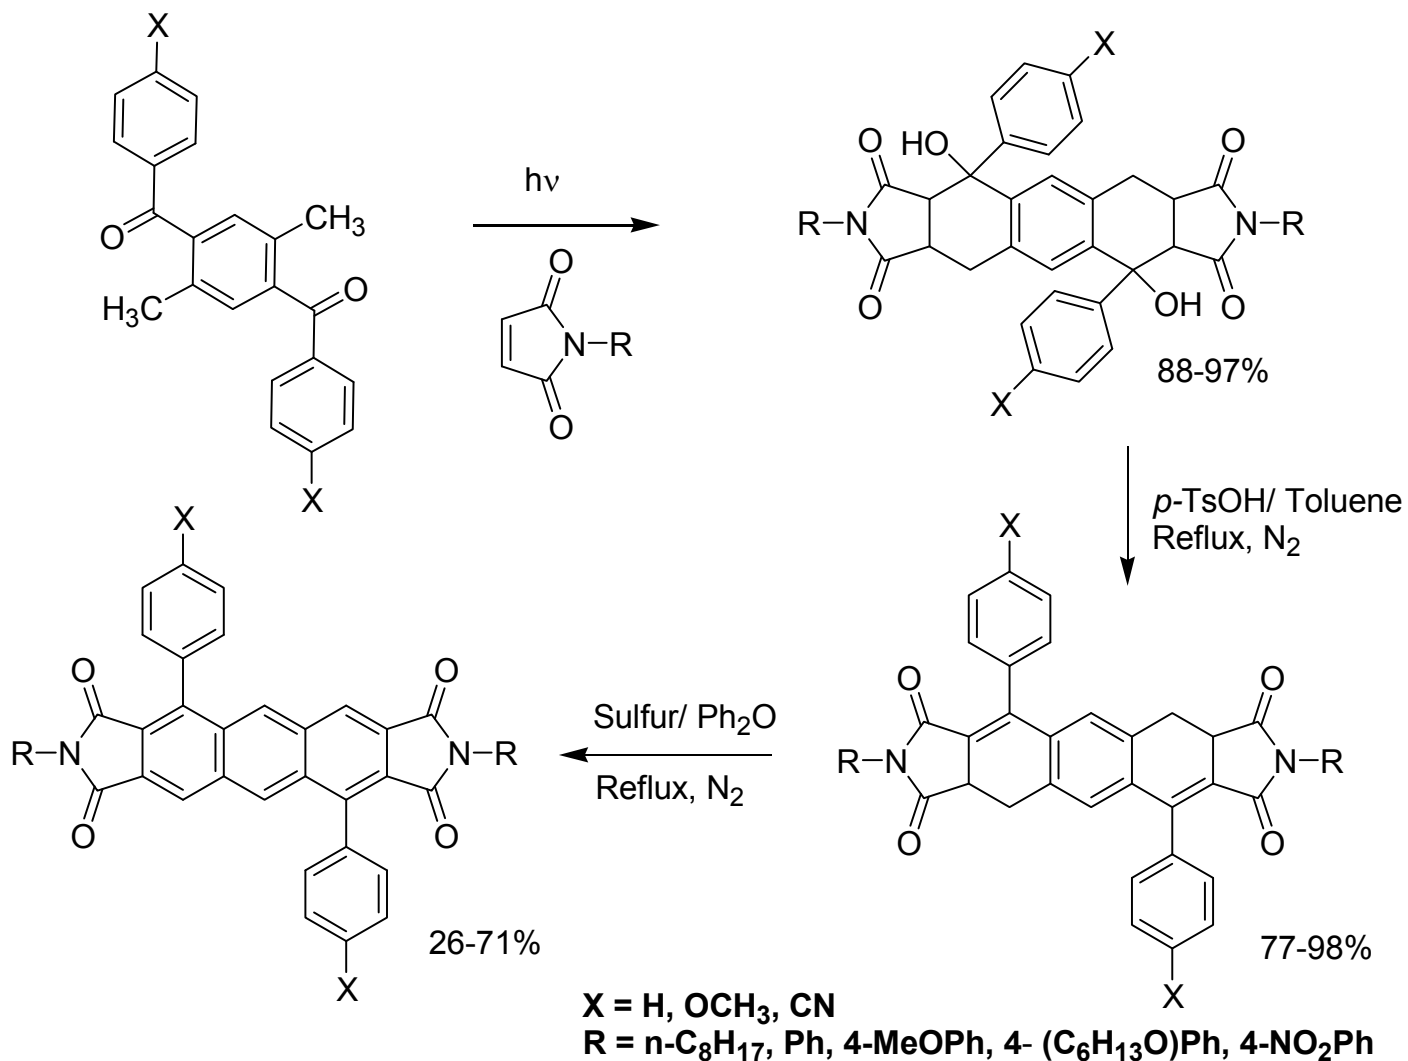




Synthesis of Tetraaryl Diimides – Trapping Unaffected by Steric Hindrance

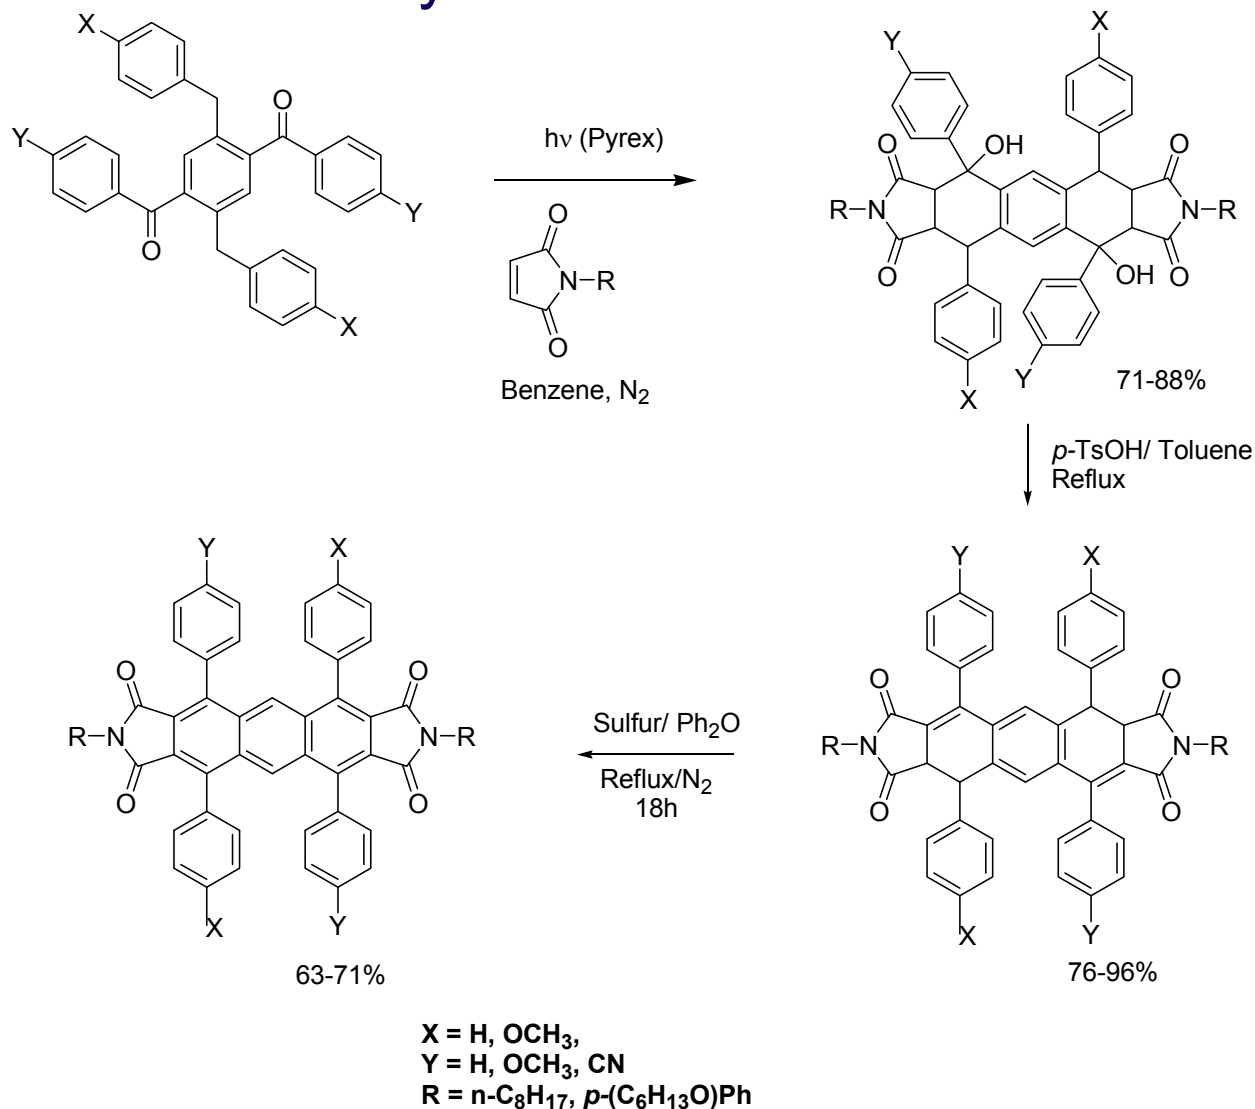


Substituent and Solvent Effects on Photophysics of Anthryl Diimides

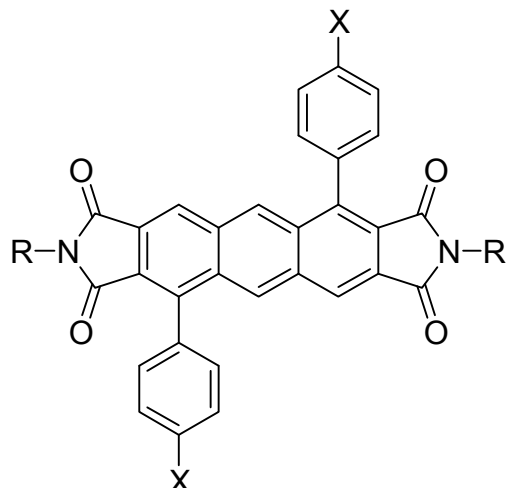




Effect of Solvent on Fluorescence Quantum Yields

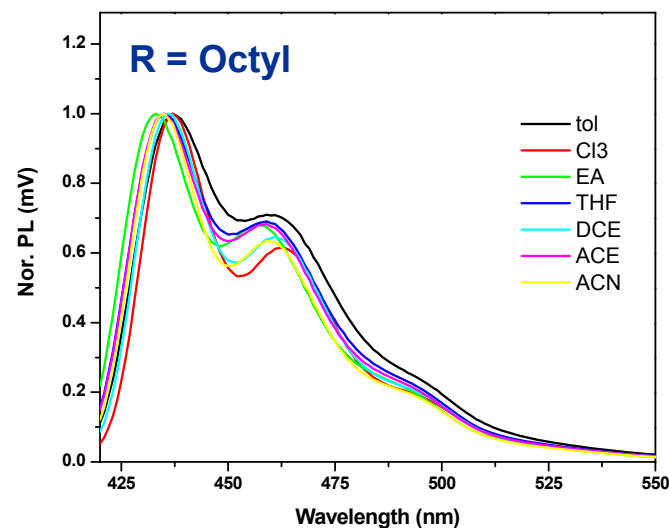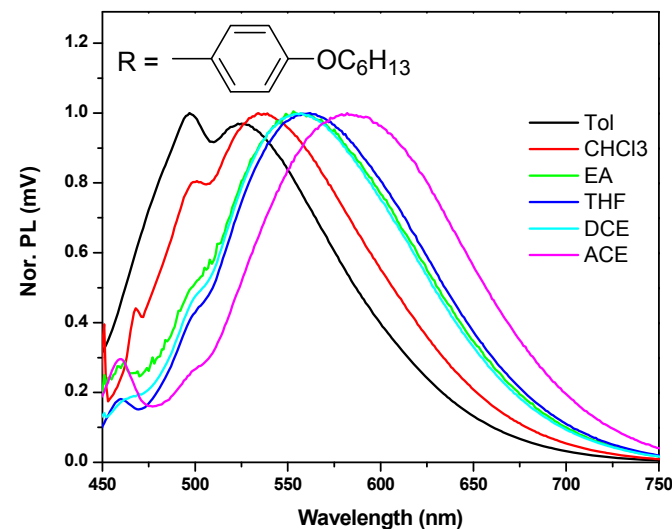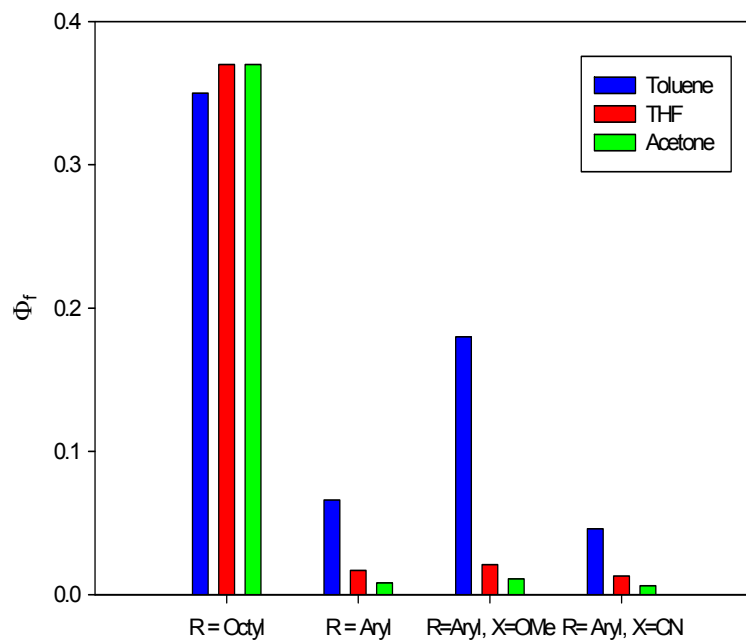





Substituent and Solvent Effects on the Photophysics of Diimides

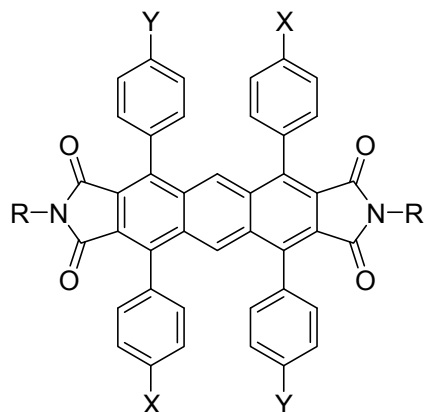


Fluorescence Quantum Yields

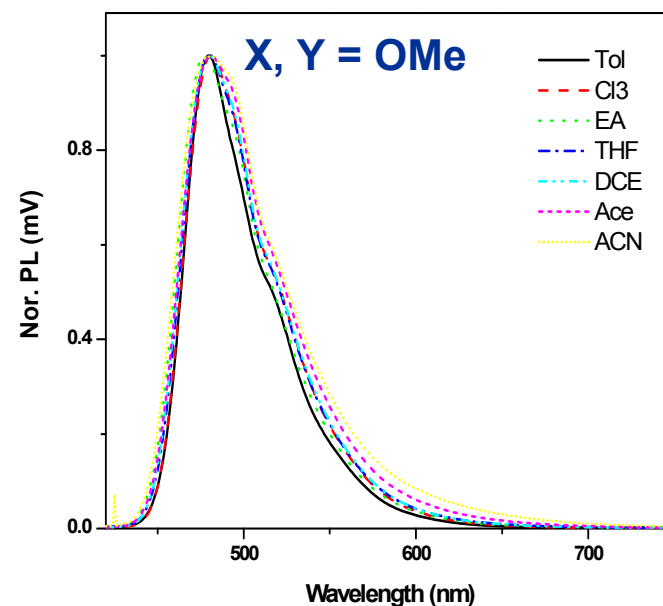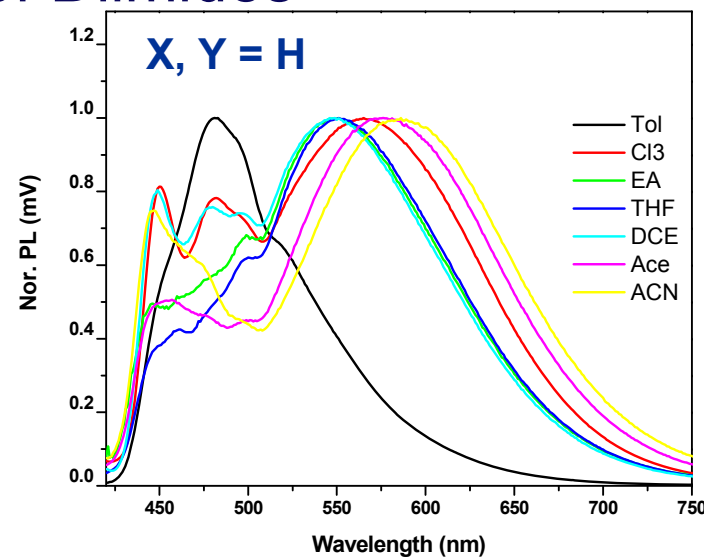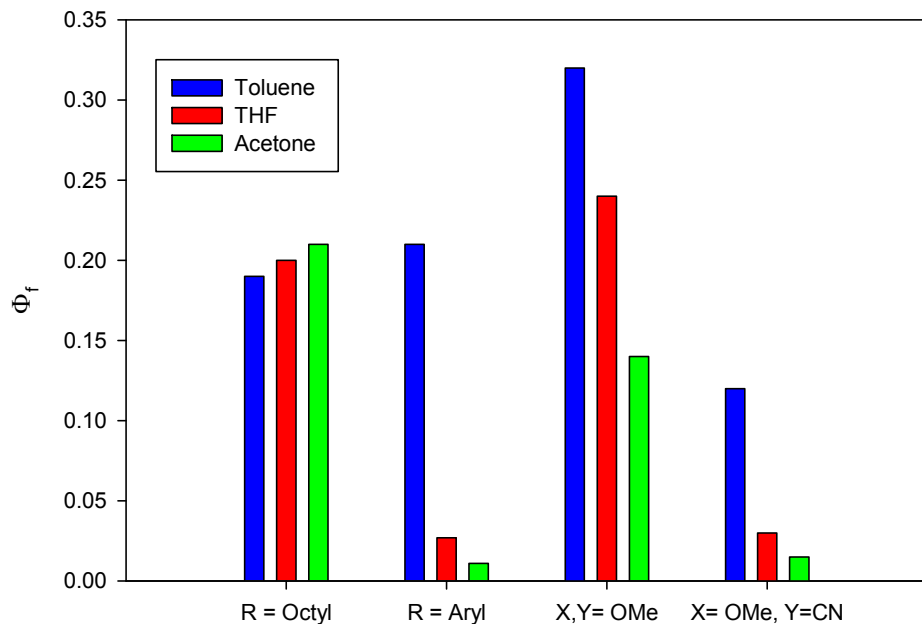

Twisting of N-Aryl Group Inhibits Charge Transfer

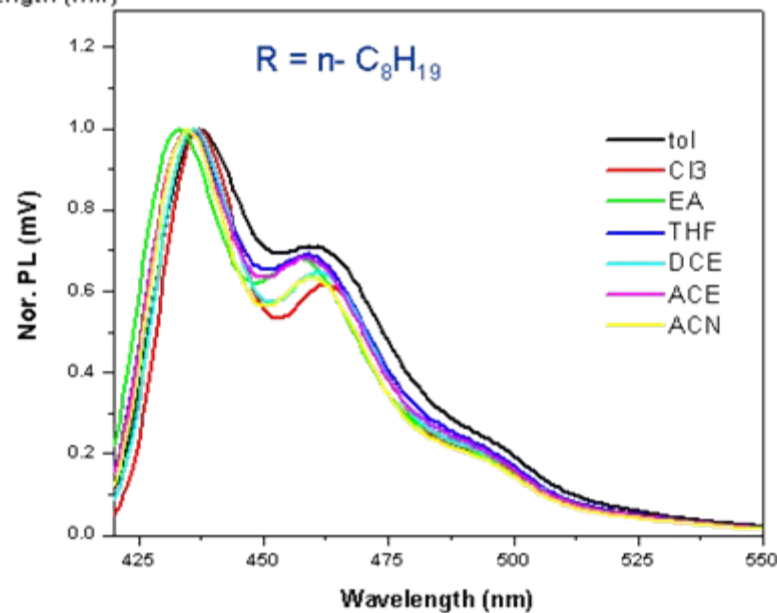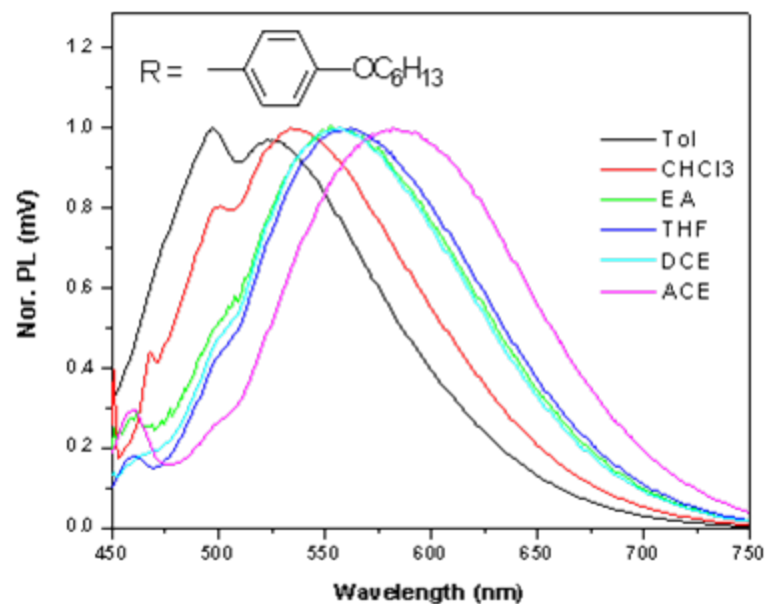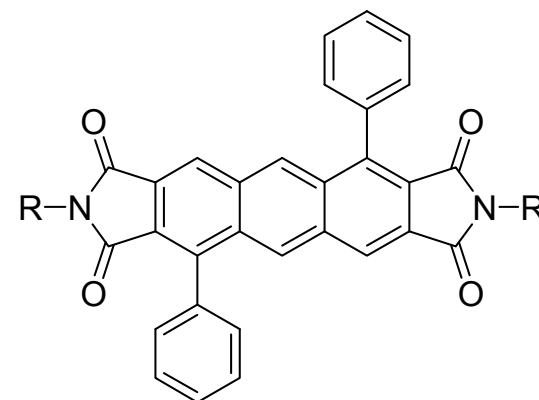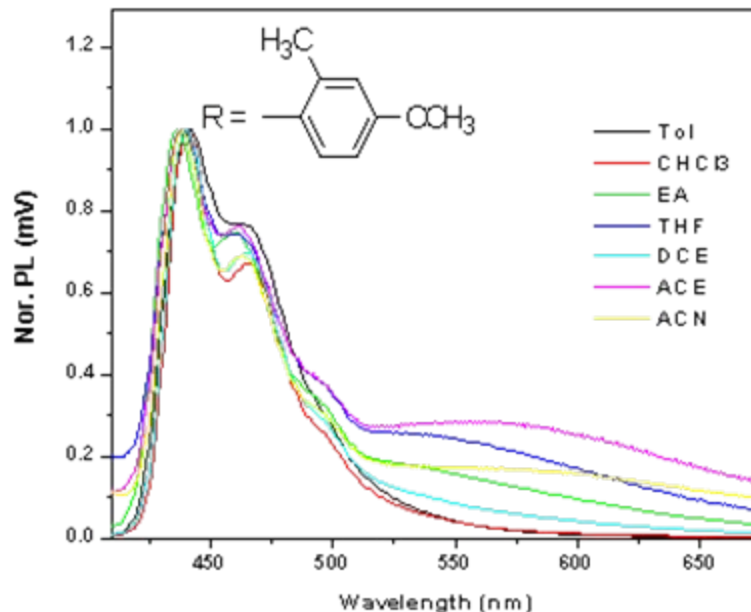

Low Temperature Emission Spectra

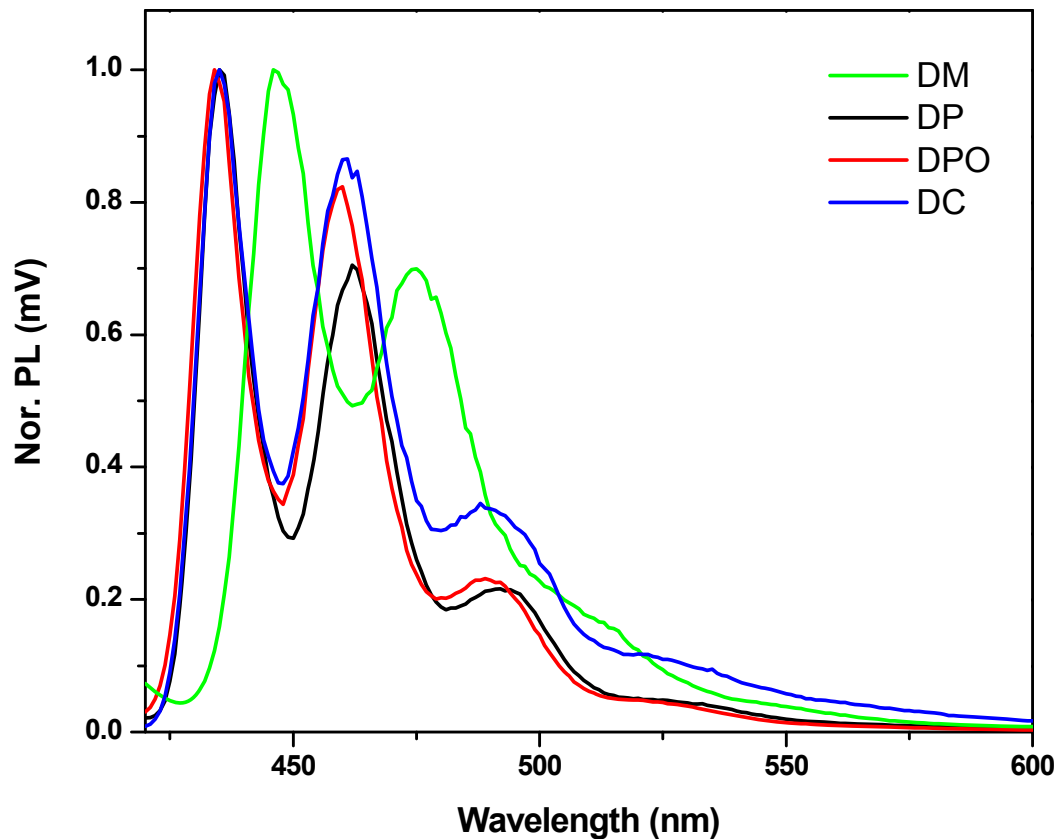


Spectra measured in MeTHF at 77°K


Reducing temperature:

- Reduces rotational motion
- Inhibits charge transfer

Steric and Electronic Effects Regulate Excited State Photophysics

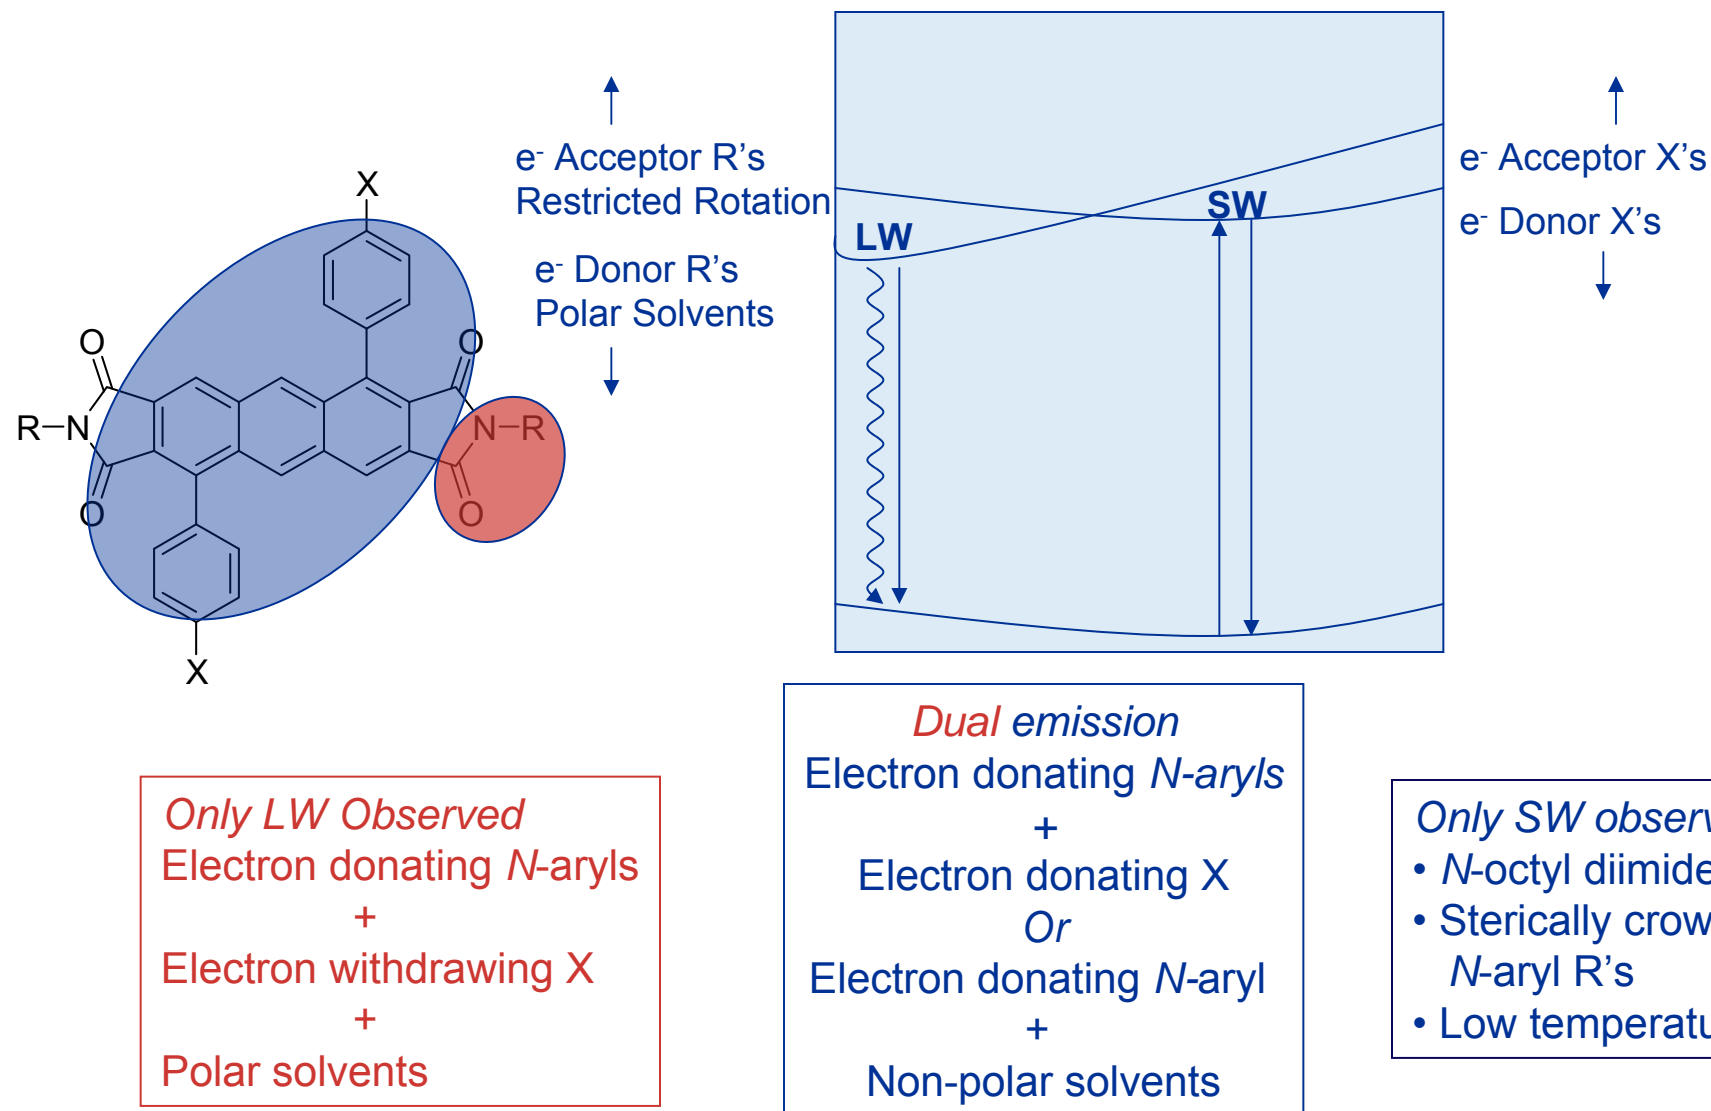




Anthracene Diimide Provides Platform for Charge Transfer Mediated Fluorescent Sensors

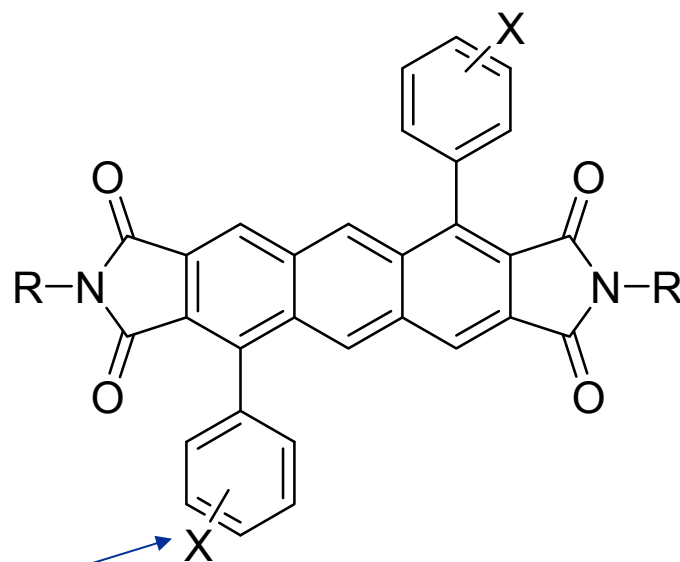

Tune absorption
and emission

Electron
donors that are
tailored to
interact with
given analyte







New Anthracene Diimide Molecular Sensor

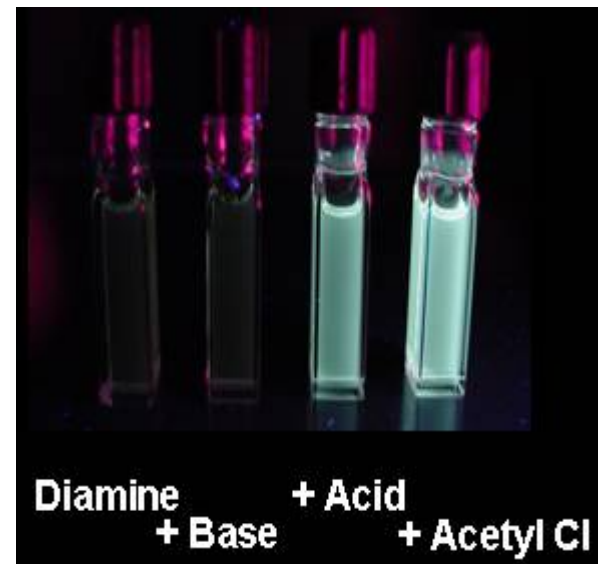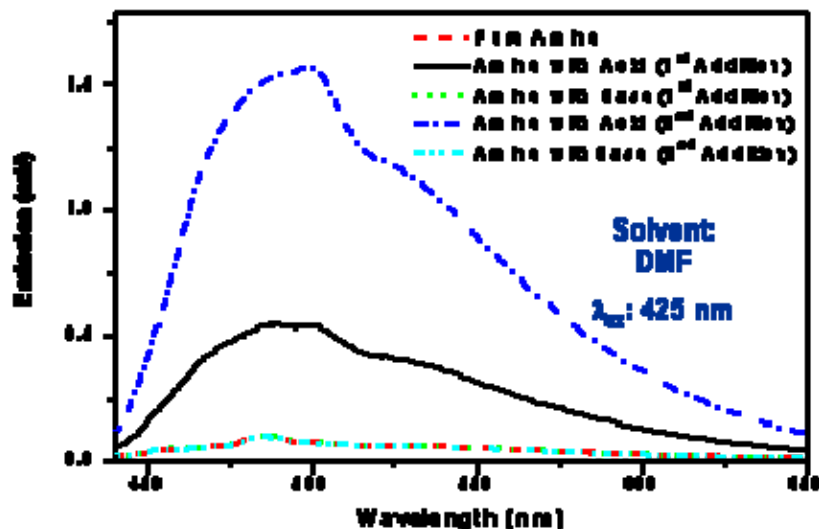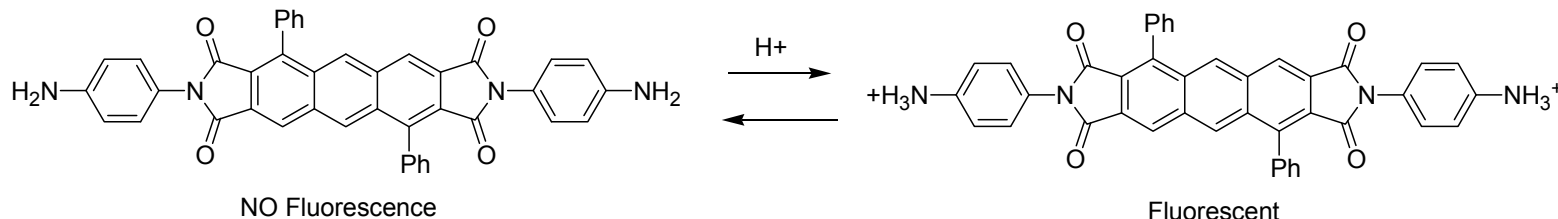





- Charge Transfer from NH_2 quenches fluorescence
- Protonation or acetylation of the NH_2 prevents charge transfer, activates fluorescence
- Potential use as:
 - ✓ sensor for pH, chemical agents (nerve gas)
 - ✓ polymer cure monitoring

Ilhan, Tyson and Meador *Chem. Mater.* **2004**


Diimide Can Detect Organophosphates

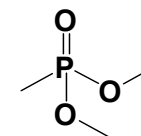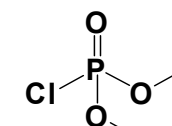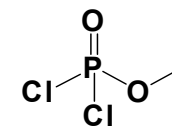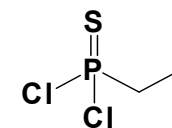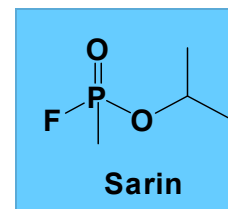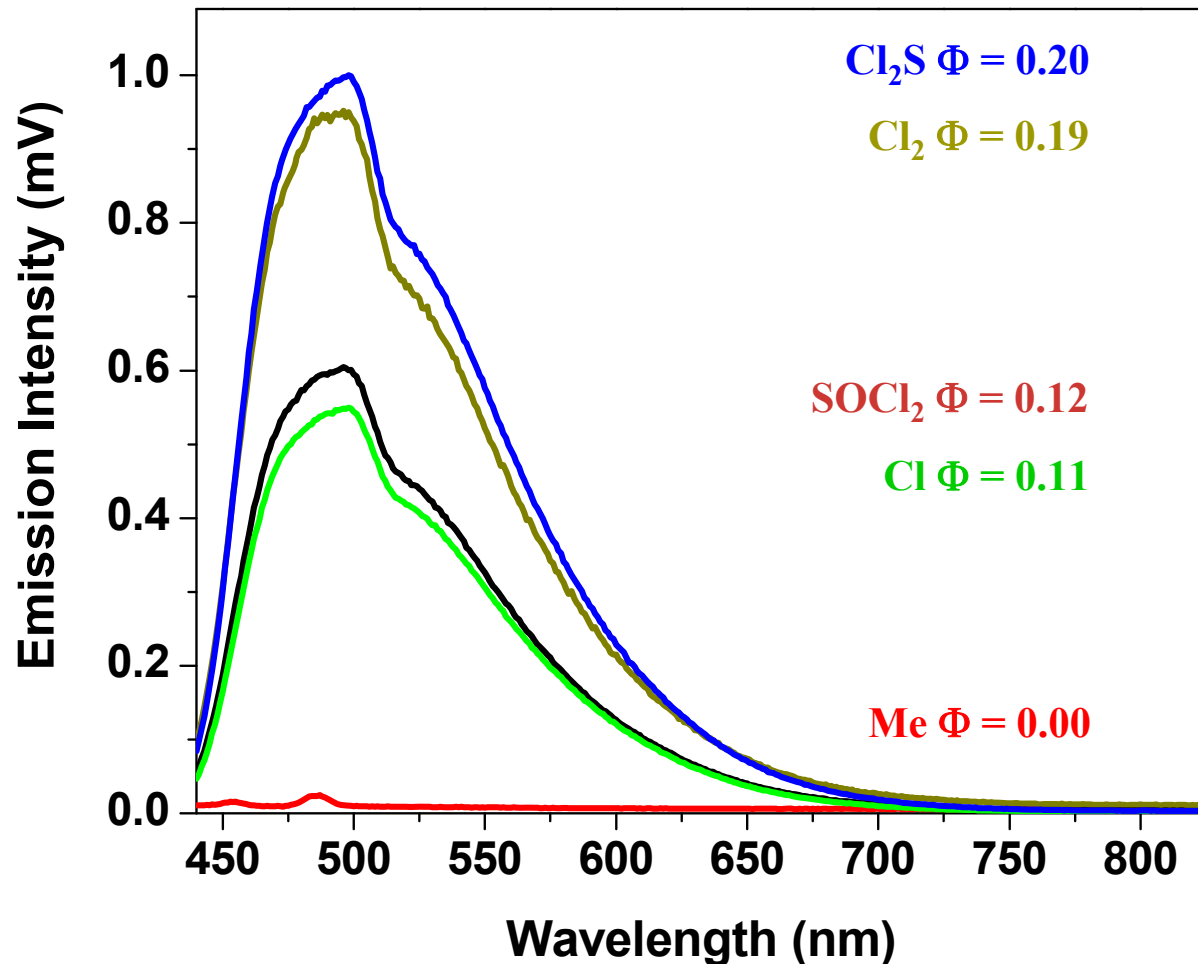

Sensor Effective for Both Liquids and Vapors

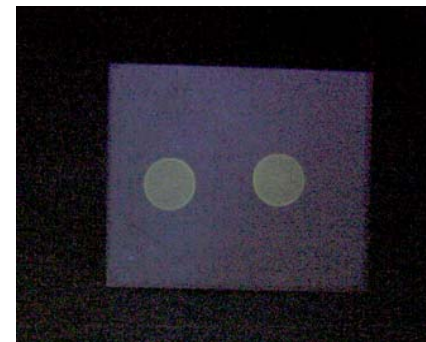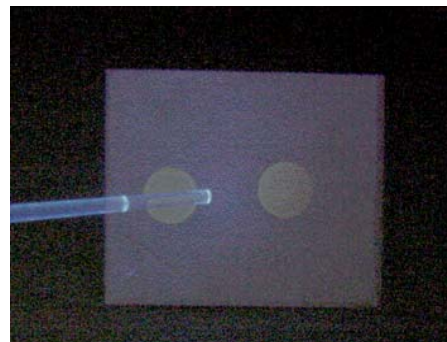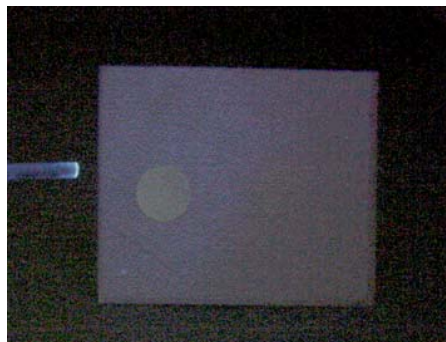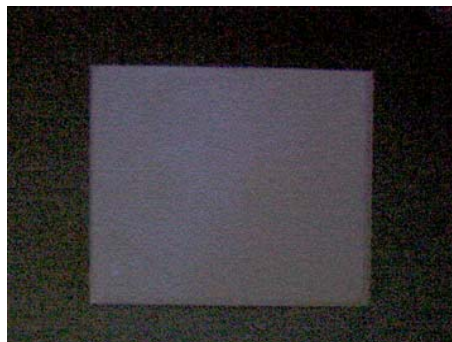


Anthracene Diimide Provides Platform for Charge Transfer Mediated Fluorescent Sensors

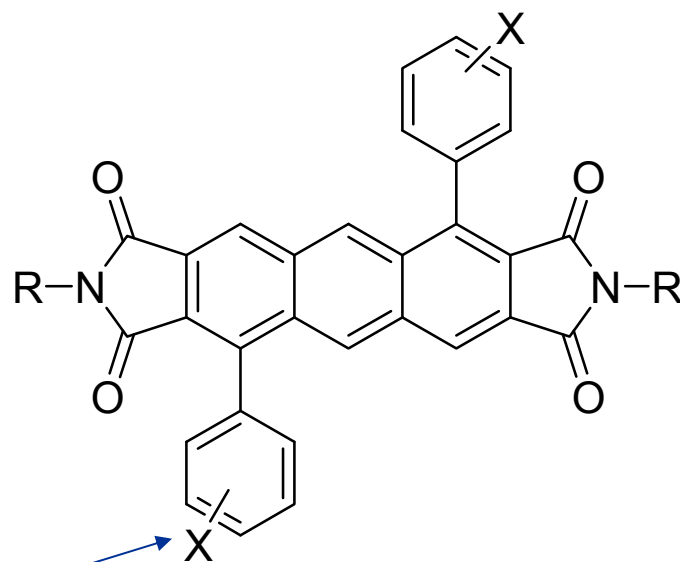

Tune absorption
and emission


Electron
donors that are
tailored to
interact with
given analyte

Anthracene Dianhydride is Key to Tailoring Sensor Specificity

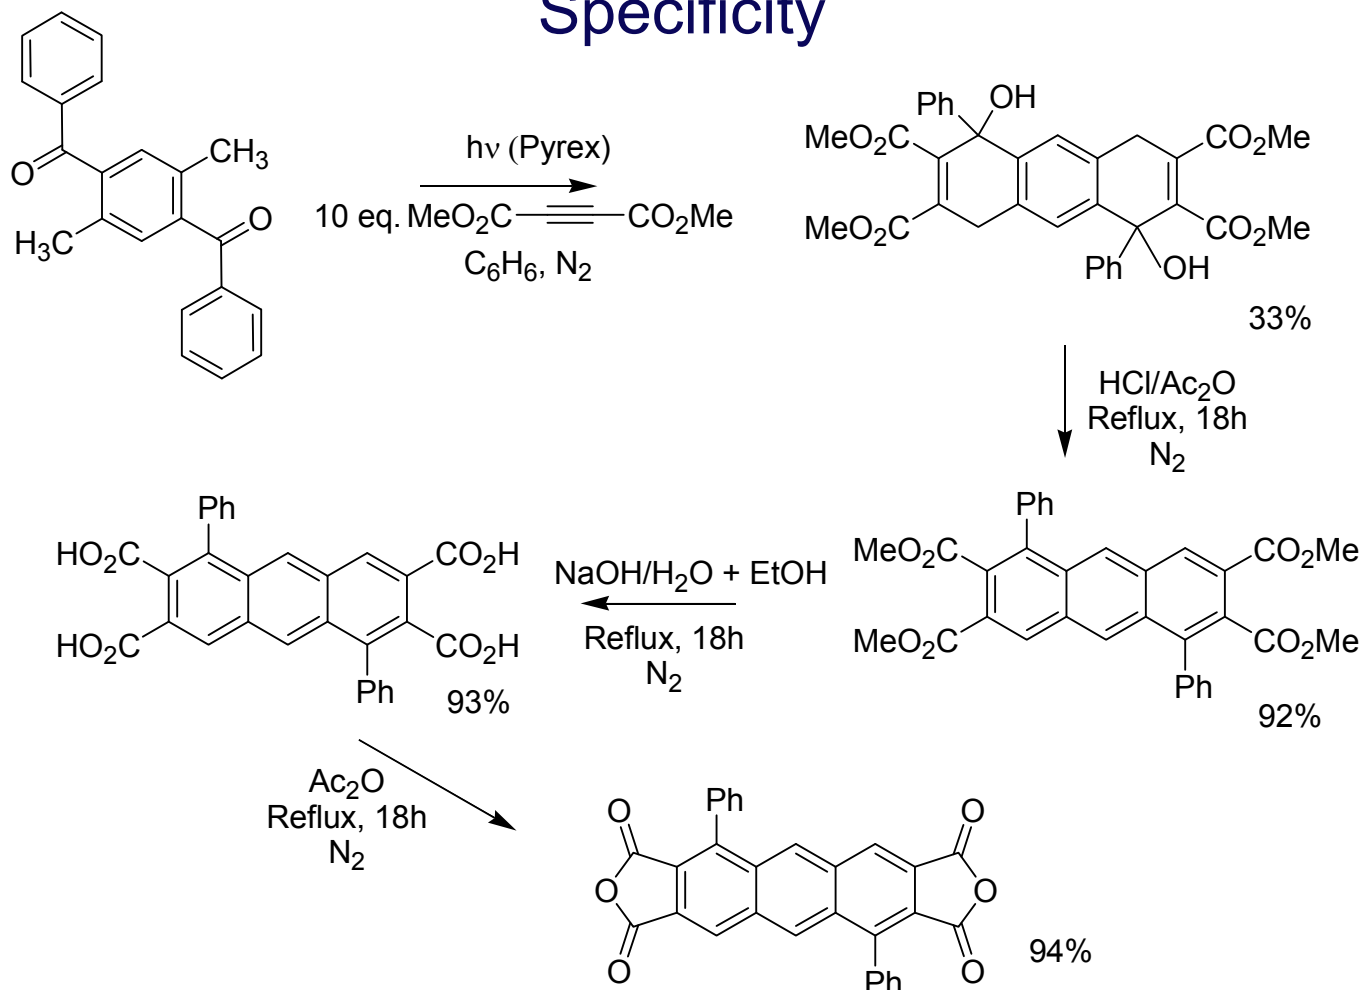


Enables attachment of substituents to imide N that might be photosensitive, e.g., pyridyl groups

Absorption and Emission Spectra

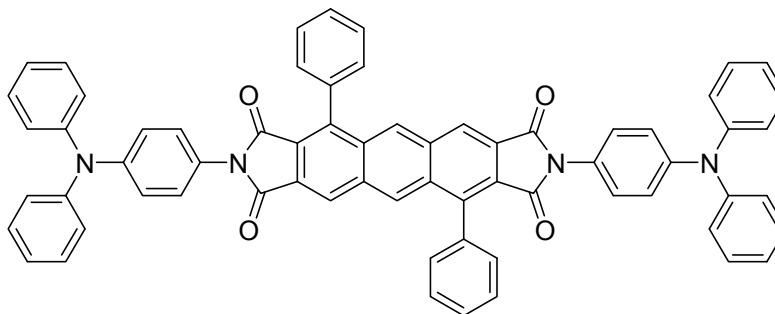


Absorption and Emission Spectra in Toluene and 1,2-Dichloroethane

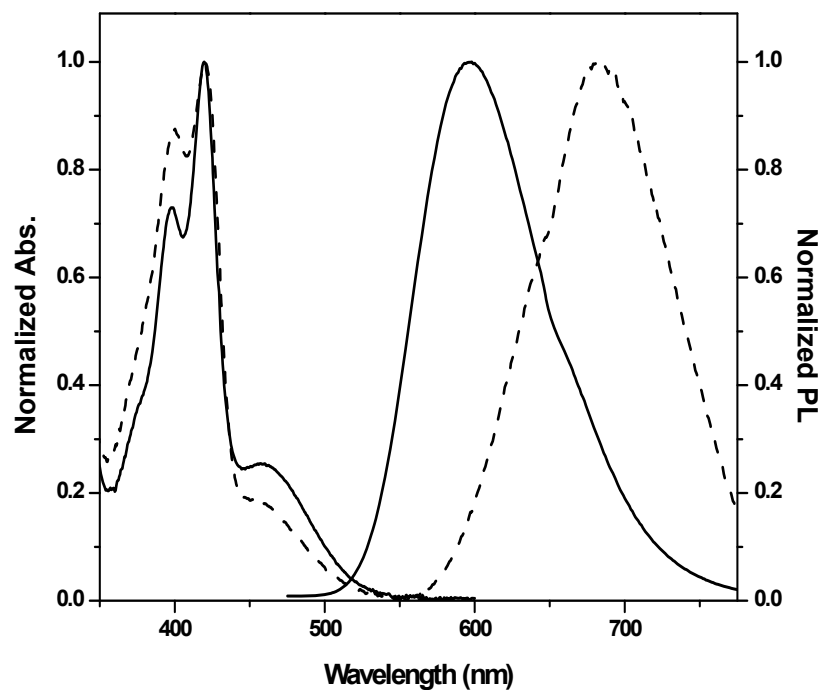

$\Phi_f = 0.035$ in Toluene
 $\tau_f = 90\text{ps}$


Diimide Fluorescence Shows Solvatochromic Behavior

Effect of Solvent Polarity on Emission Spectra


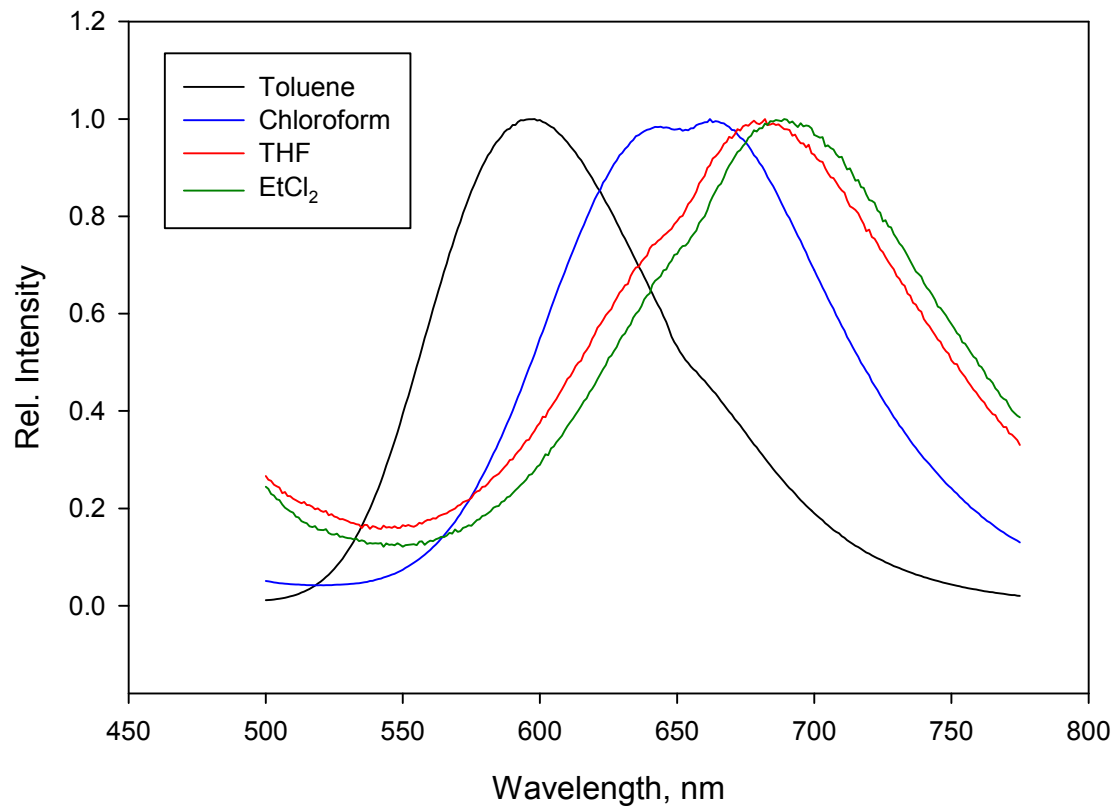


400 nm excitation

Stern Volmer Quenching with 2,4-DNT

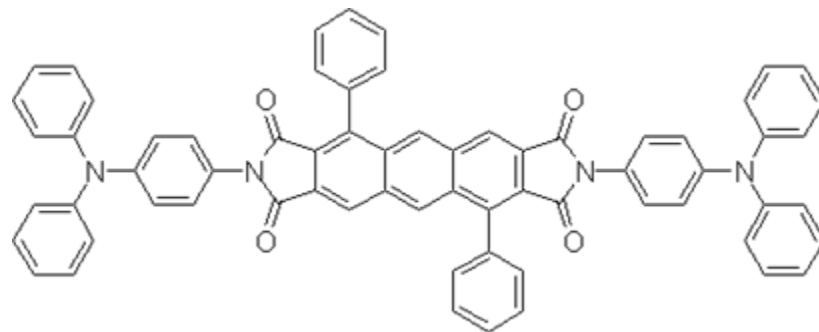


Fluorescence Inhibited by Addition of Acids

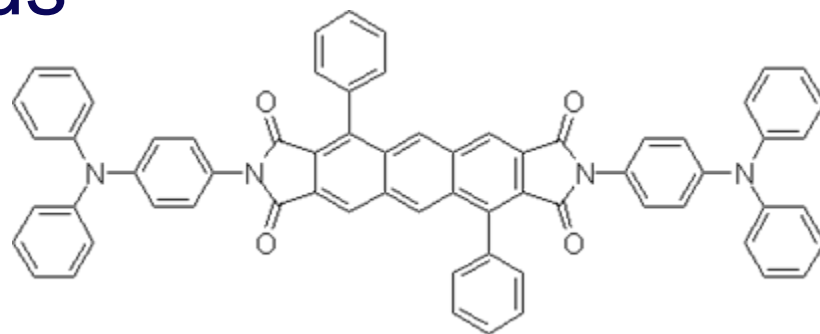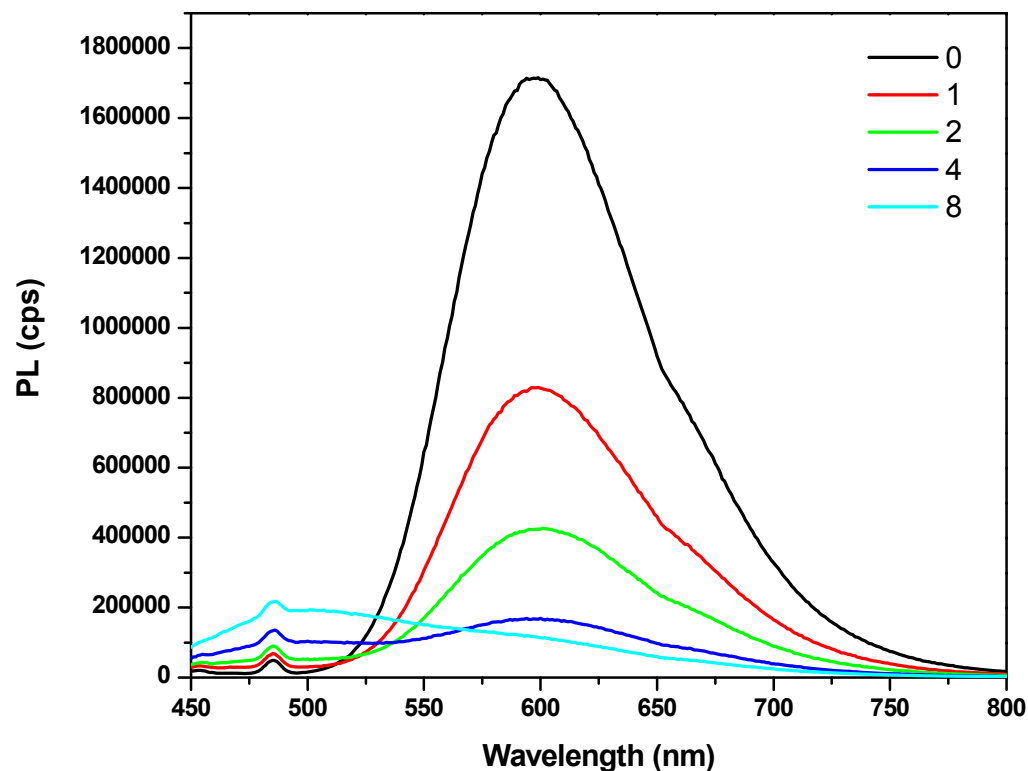

Addition of TFA protonates amine and inhibits charge transfer


Excitation at 400 nm

Aggregate Formation in Solid State is Evident in X-Ray

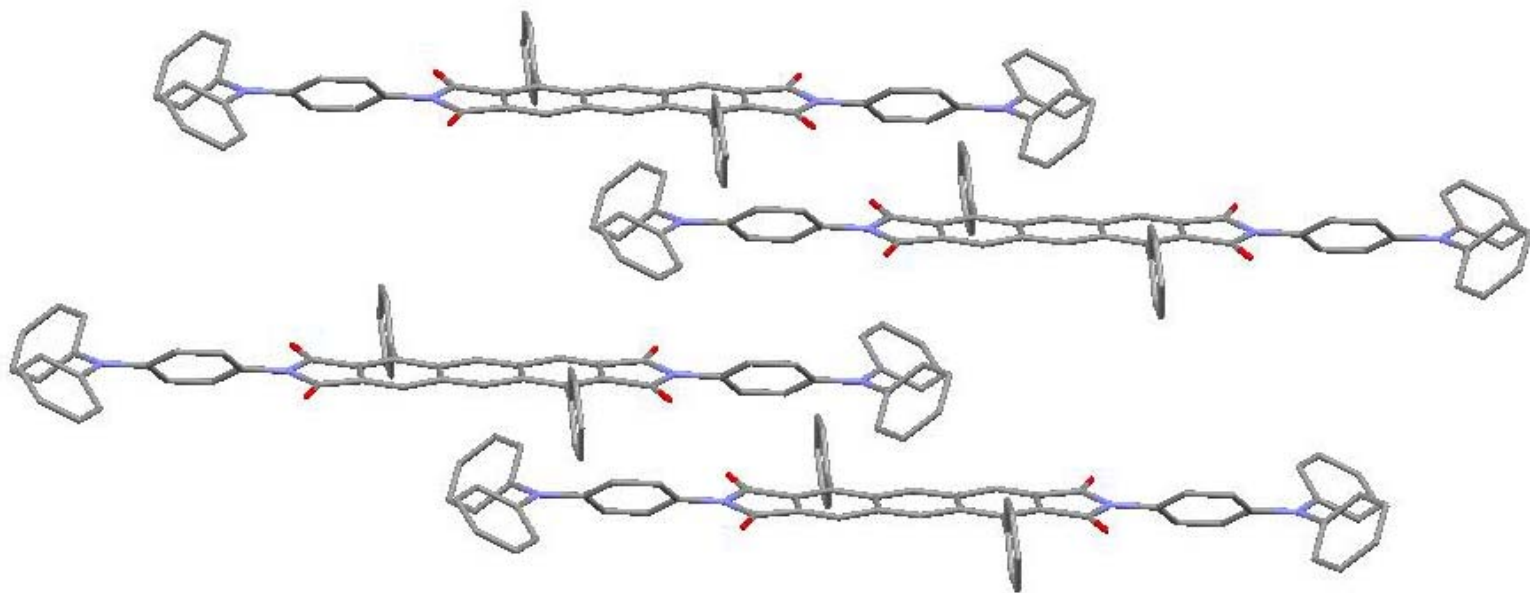

Increased Loading Levels Lead to Red Shifted Emission


Emission Spectra in Polystyrene

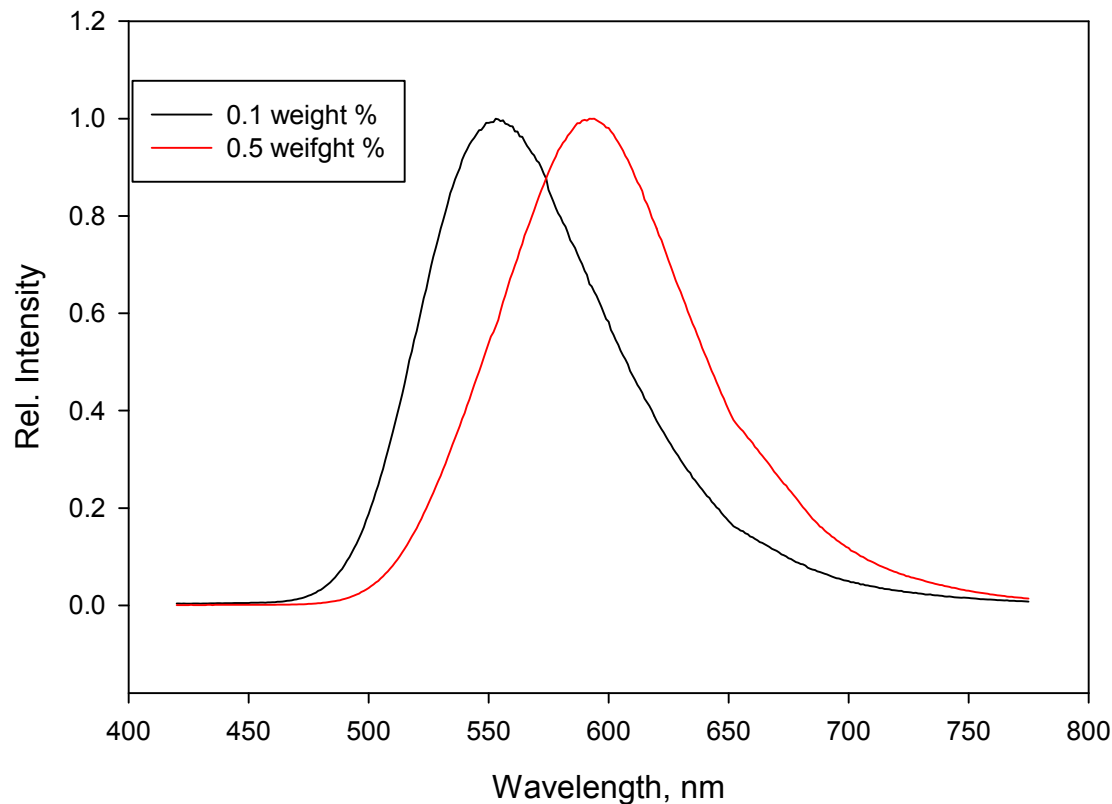

Suggests formation of dye aggregates in the polymer

TPAA Doped Films Exhibit Thermochromic Behavior



Effect of Temperature on Emission Spectra of Dye Doped LLDPE

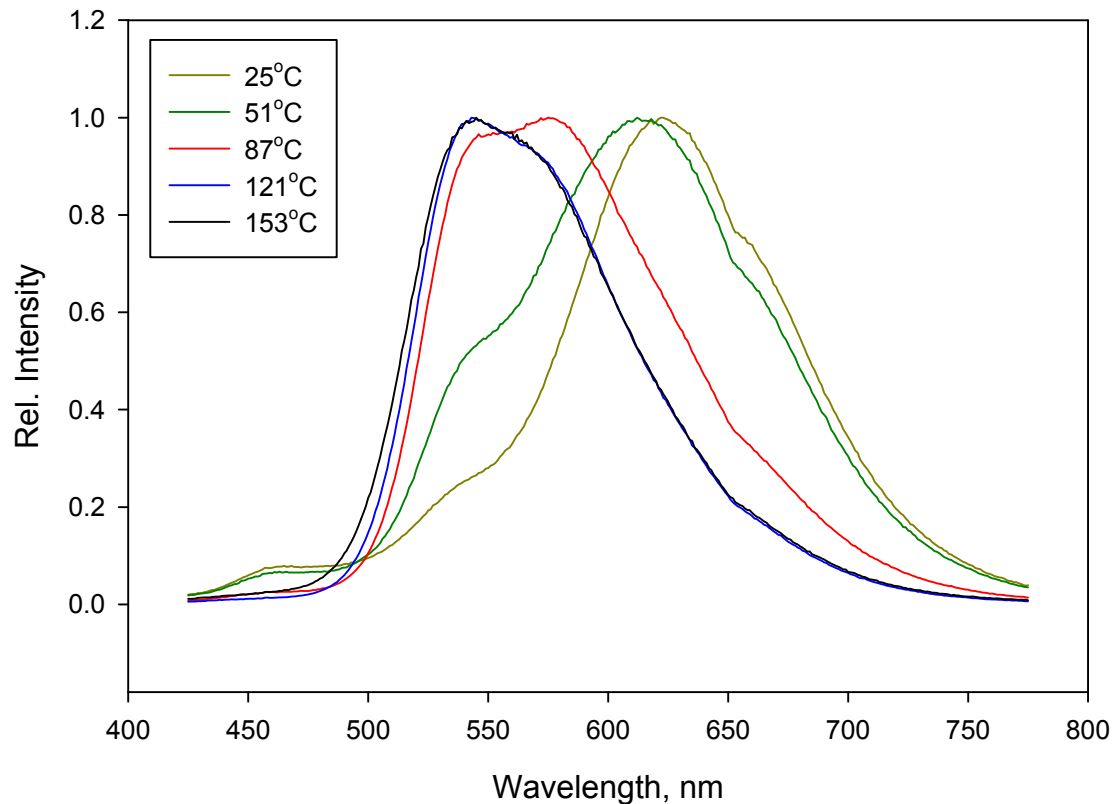



- Aggregation disrupted at higher temperatures – blue shift
- Process is reversible

Mechanochromic and Thermochemichromic Polymers

Crenshaw, B.R. and Weder, C. *Macromolecules* **2003**, 15, 4717-24

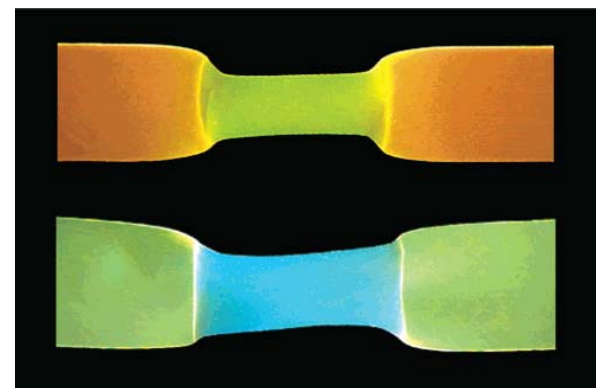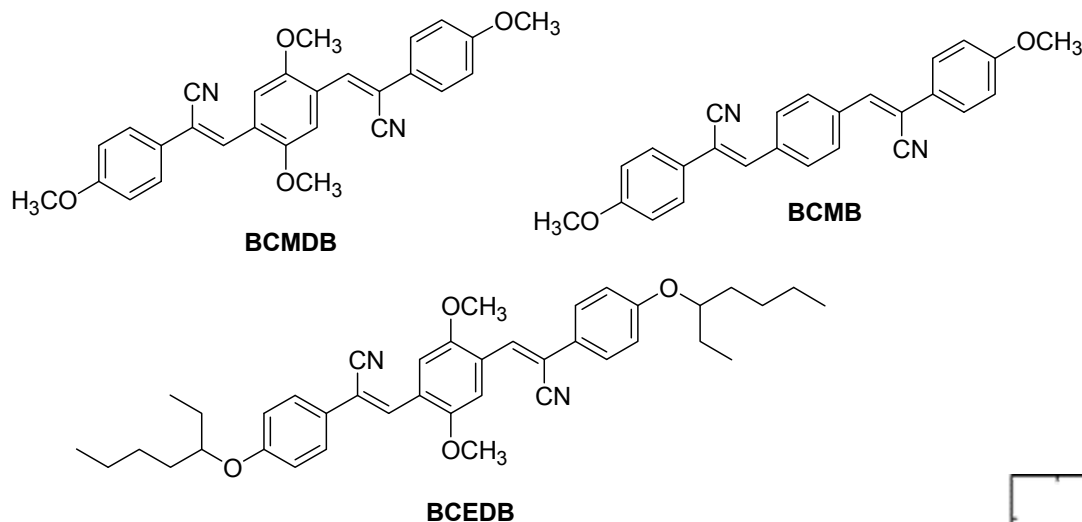

Stretched Films of 0.18 wt. % BCMDB and BCMB in LLPE

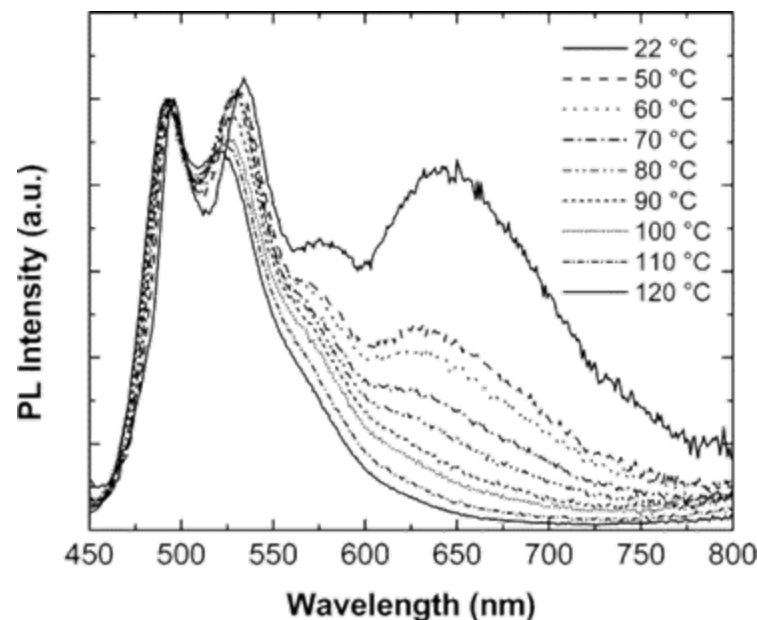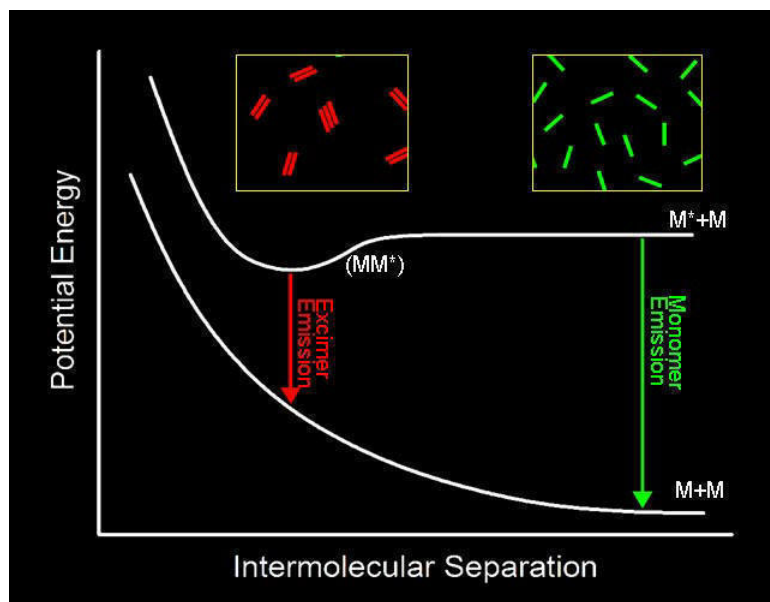


PL Spectra of 0.2 wt. % BCDMB/LLPE Film as a Function of Temperature

Polymer Films and Nanowires for Field Effect Transistors

Applications:

- Small size, power-efficient flexible electronic circuitry for space exploration applications
- Communications and data storage circuitry that can be interwoven into clothing and other surfaces
- Active matrix light emitting diodes, RF identification cards

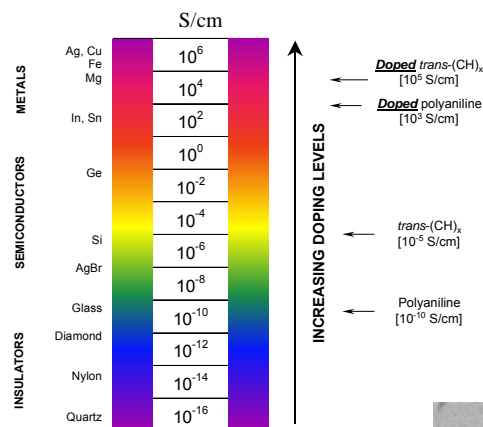


The electrical conductivity of bulk polyaniline can be varied From 10^{-10} to 6×10^3 siemens per centimeter

Technology development requires interdisciplinary collaboration


Materials Optimization

Device Characterization


Nano-metrology

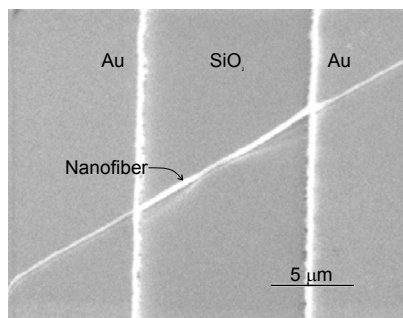

SEM image of nanofiber Deposited on metallized SiO_2/Si substrate

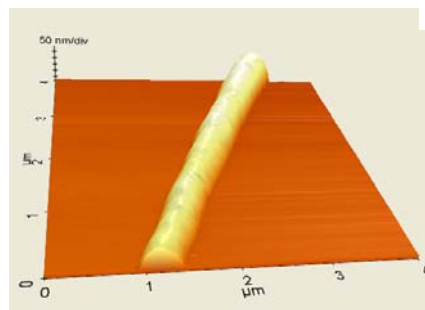


AFM image of polyaniline/polyethylene nanofiber

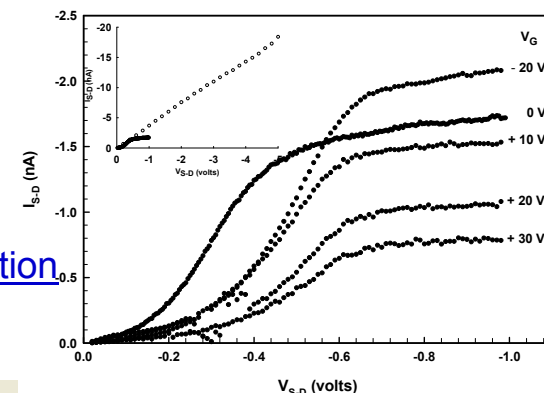


Current- voltage characteristics of nanofiber FET

Point of Contact:
Dr. Félix A. Miranda,
RCA
216-433-6589

Pentacene/PEO Nanofiber FETs

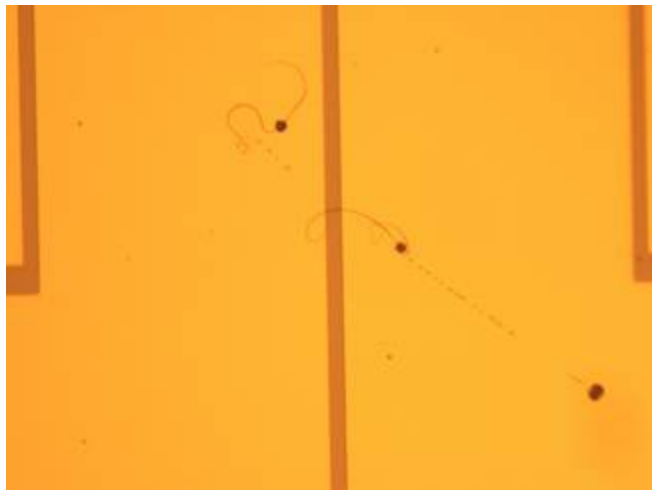





Electrospun Pentacene/PEO Fiber (vacuum)
20 August 2007

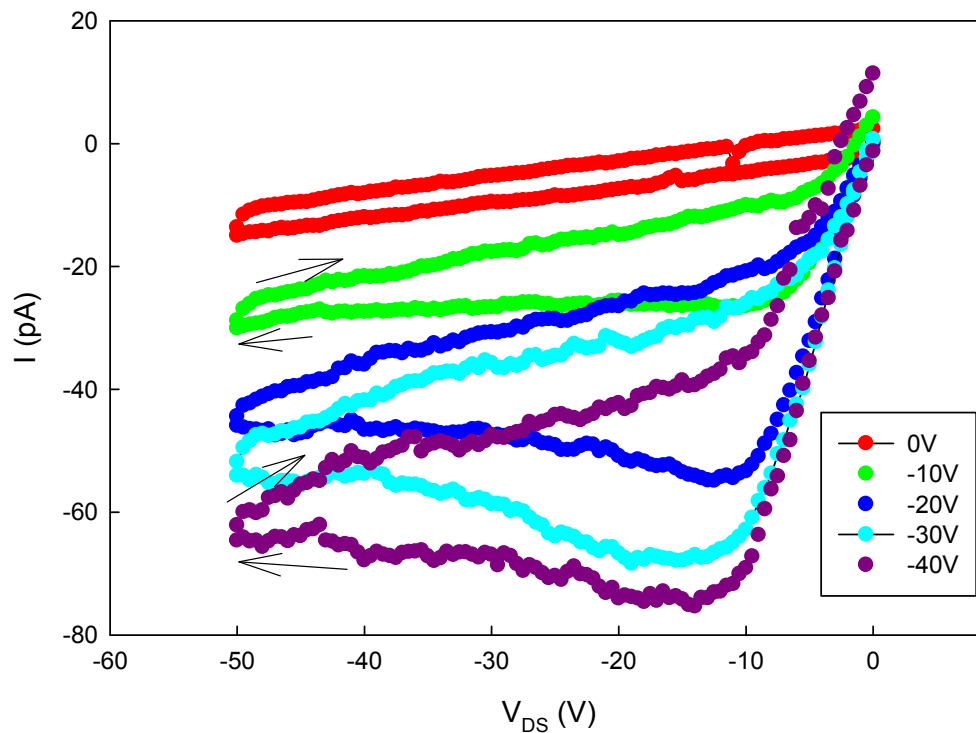

**Pentacene/PEO nanofibers grown
by Prof. Nicholas Pinto, U of Puerto
Rico- Humacao**



Twistacenes

Wudl, F. *et al Org. Lett.* **2003**, 5, 4433-36

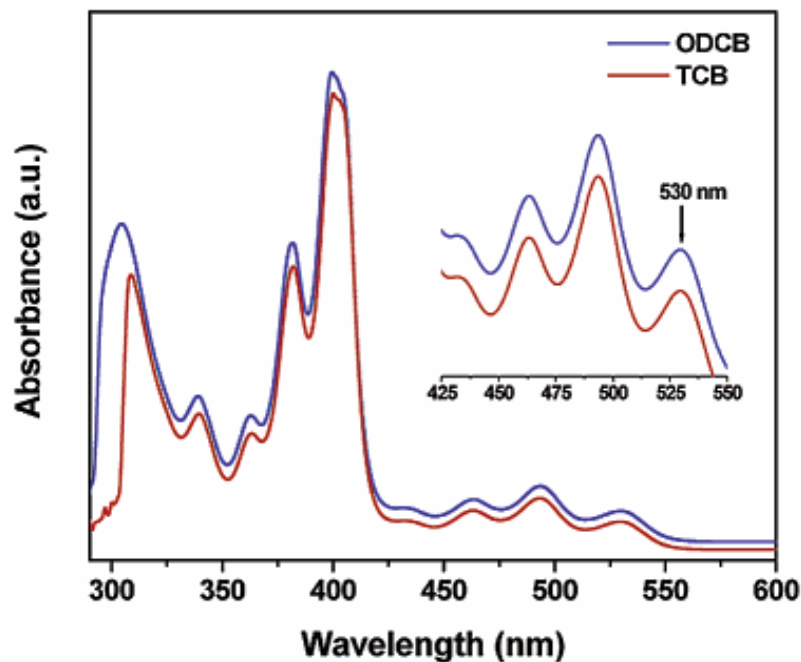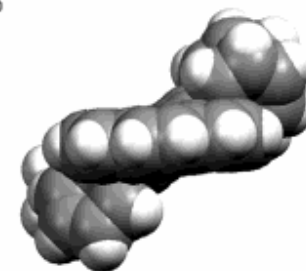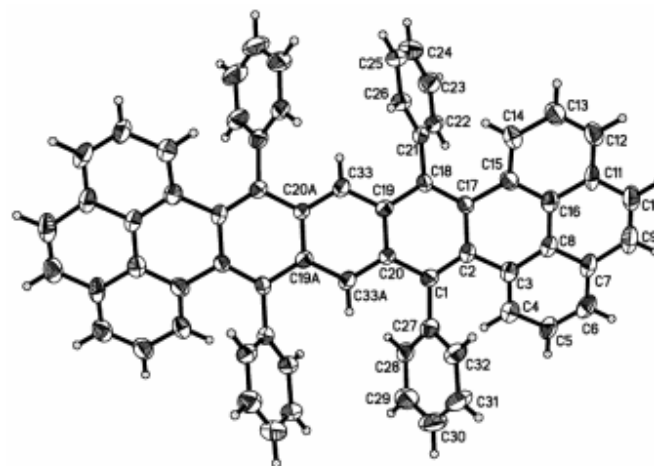
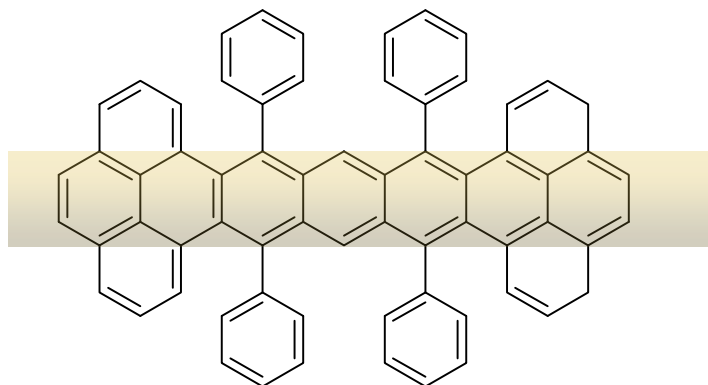


- Addition of pendant phenyls adds steric bulk-enhances photooxidative stability, prevents quenching
- Addition of perylene endgroups enhances Φ_f

Twistacenes

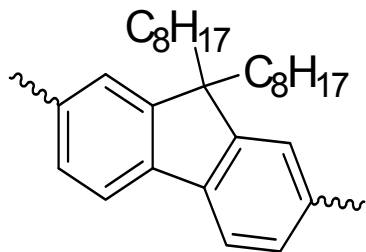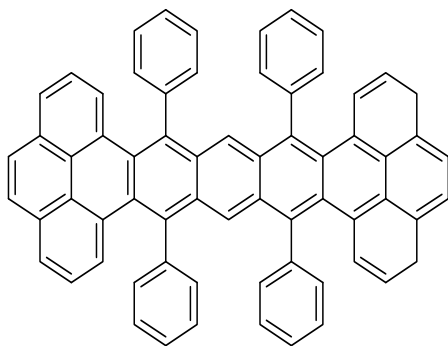


Xu, Q.; Duong, H.M.; Wudl, F.; Yang, Y. *Appl. Phys. Lett.* **2004**, 85, 3357-59

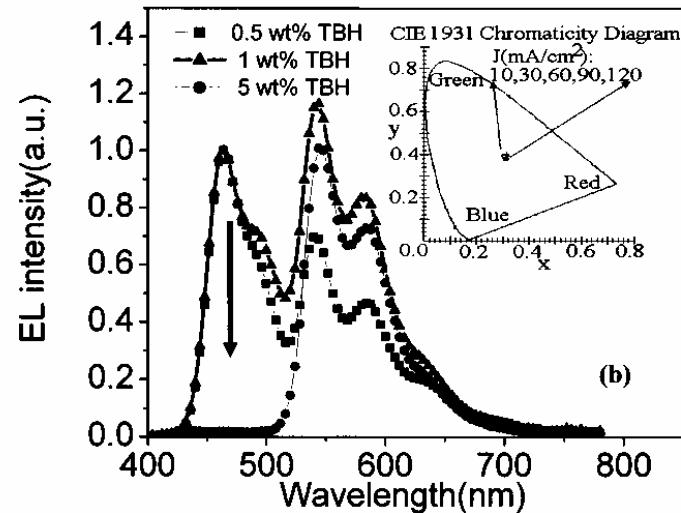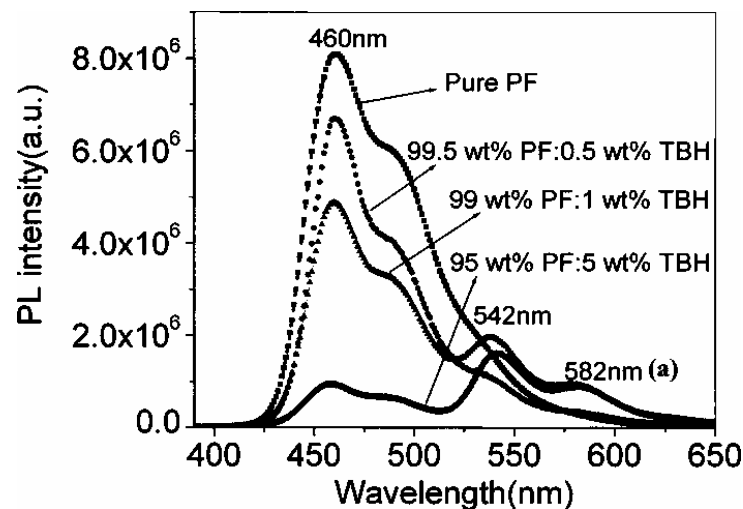

Effect of added TBH on intensity of PL and EL of poly(fluorene films)

Beyond Anthracenes and Perylenes

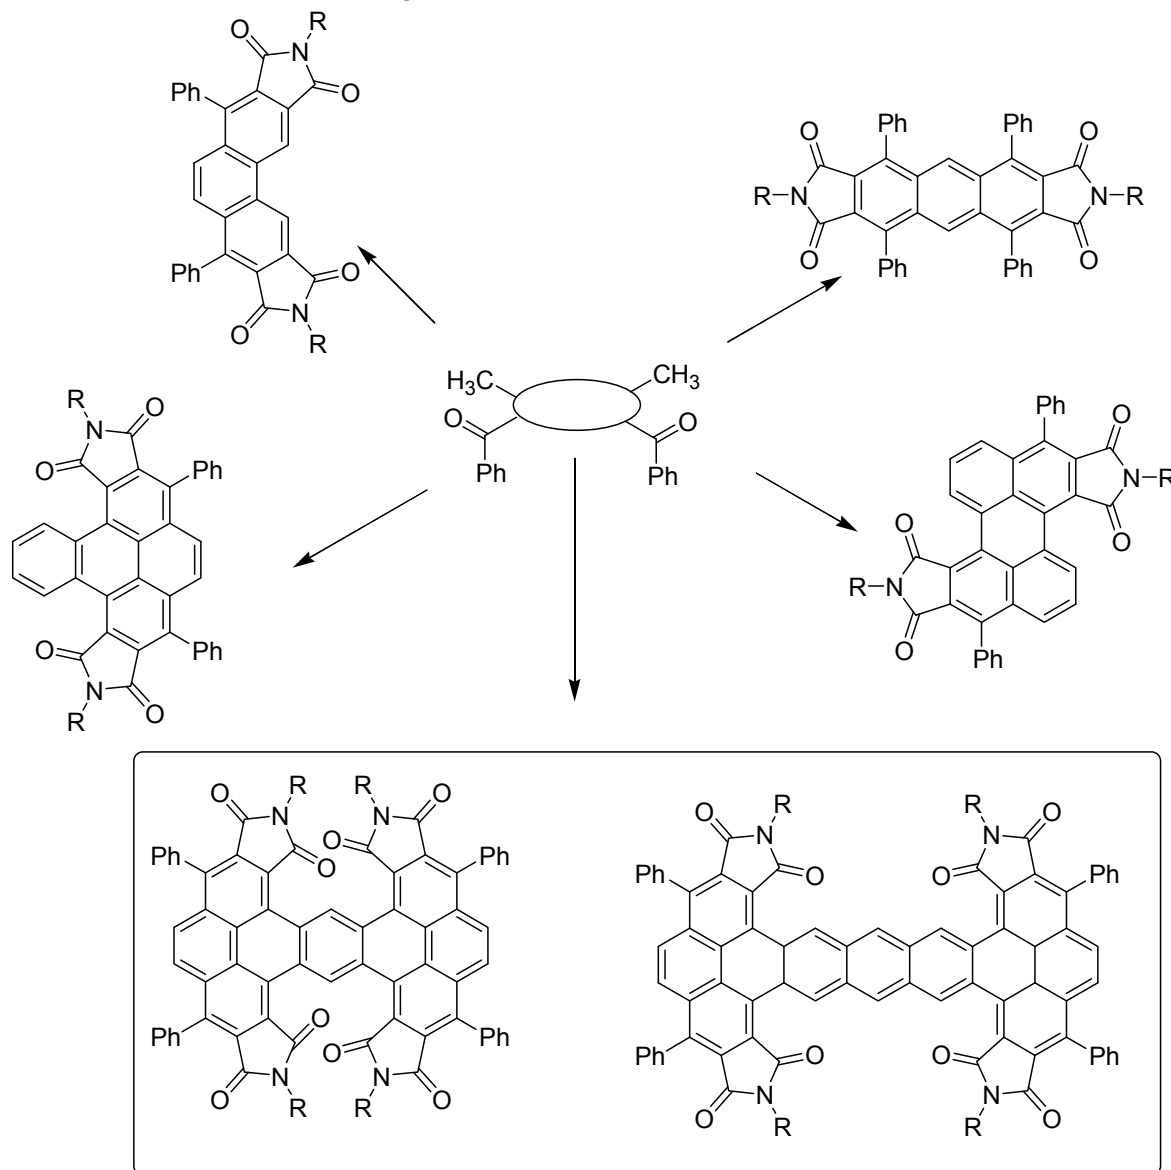

- Increasing number of benzene rings (conjugation) makes the molecule more polarizable
- Adding pendant groups improves stability and solid state fluorescence efficiency
- Flexible chemistry enables tailoring of electronic properties
- Potential for use in photovoltaics, molecular electronics and photonics



Summary

- Developed new route to highly substituted aryl diimides
 - Anthracenes
 - Perylenes
 - Pyrenes
 - Higher homologues
- Exploited excited state behavior to develop fluorescent sensors
 - Chemical species
 - Warfare agents
 - Temperature
- Incorporation of these dyes into polymers has the potential for making “smart” films, fibers, and composites



Acknowledgements

- NASA Undergraduate Student Research Program
- NASA Grant NNC07BA13B
- Funding from the Fundamental Aeronautics Program and the Glenn Innovative Research and Development Fund